

A224/A225 Electric Clutch Kit

Double-Groove Pulley Installation Instructions

Applicable Models:

STX2 & XTA Series

Install the Electric Clutch

Note

Apply anti-seize to the engine shaft where the electric clutch will slide on.


- 1. Slide the square shaft key (3) and electric clutch (2) onto the engine shaft (1).
- 2. Secure the electric clutch to the engine shaft using a 3/8" x 3" bolt (4) or 7/16" x 3" bolt (4) (engine-model dependent) and lock washer (5).

Note

When properly adjusted the electric clutch should be tight and unable to slide on the shaft.

- 3. Place the motor so that the gap between the face of the electric clutch and the inside face of the guard attach bracket is 2–5/16".
- 4. Connect all belts.
- 5. Position the 5/16" x 5" bolt (6) so that it fits into the clutch case slot to prevent the clutch from rotating, and secure it with two 5/16" whiznuts (7).

Figure 1. Installing the Electric Clutch

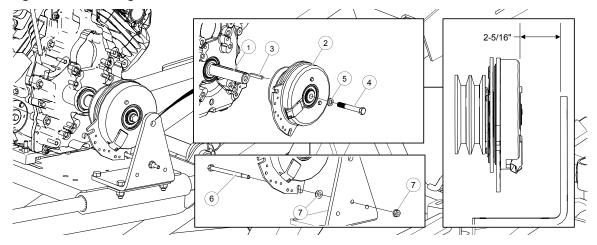


Revised: OCTOBER 2019

Wire the Electric Clutch

- 1. Plug the clutch wiring harness into the clutch, and position the other end of the harness in a way that leaves it accessible for external wiring.
- 2. Complete the remaining electrical connections, using 14 gauge crimp connectors (splice, spade, and ring terminal) as needed:
 - connect the white switch cable wire to one of the clutch harness connector terminals;
 - connect the black switch cable wire to the fuse, and from there to 12 VDC power;
 - connect the remaining clutch harness connector terminal to ground.
- 3. Test the switch to ensure that the electric clutch engages and disengages properly.
- 4. Use electrical tape to seal and secure any electrical connections that might require weather-proofing.
- 5. Run the electrical cable through the lower frame to prevent accidental disconnection of wiring if the cable is pulled tight.
- 6. Secure the cable when not in use.

Figure 2. Electric Clutch Wiring Diagram

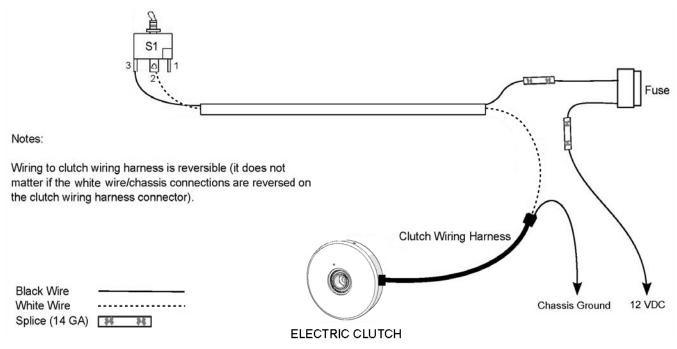



P.O. BOX 39 Rosenort, Manitoba, ROG 1W0 Canada Phone: (866) 467-7207 (Canada & USA) or (204) 746–2396 Fax: (866) 768-4852

Website: www.grainaugers.com Email: sales@grainaugers.com ©Ag Growth International Inc. 2019, Printed in Canada

2 31043 R3