



GRAIN AUGERS

WR 60/80/100 X 26' - 71' EMD MODEL ASSEMBLY & OPERATION MANUAL

WR EMD Augers covered in this manual:

60-26, 60-31, 60-36, 60-41, 60-51, 60-61

80-26, 80-31, 80-36, 80-41, 80-46, 80-51, 80-56, 80-61, 80-71

10-31, 10-41, 10-51, 10-61, 10-71

ORIGINAL INSTRUCTIONS



Read this manual before using product. Failure to follow instructions and safety precautions can result in serious injury, death, or property damage. Keep manual for future reference.

Part Number: 30255 R3

Revised: 30/6/15



This product has been designed and constructed according to general engineering standards^a. Other local regulations may apply and must be followed by the operator. We strongly recommend that all personnel associated with this equipment be trained in the correct operational and safety procedures required for this product. Periodic reviews of this manual with all employees should be standard practice. For your convenience, we include this sign-off sheet so you can record your periodic reviews.

[illegible]

- a. Standards include organizations such as the American Society of Agricultural and Biological Engineers, American National Standards Institute, Canadian Standards Association, International Organization for Standardization, EN Standards, and/or others.



TABLE OF CONTENTS

1. Introduction	5
1.1. Equipment Purpose	6
1.1.1. General Description	6
1.1.2. Intended Use	6
1.1.3. Misuse	6
2. Safety	7
2.1. Safety Alert Symbol and Signal Words	7
2.2. Basic Operator Safety, Responsibilities, & Qualifications	7
2.2.1. Personal Protective Equipment (Required to be Worn)	8
2.2.2. Safety Equipment Required	8
2.3. Drives and Lockout Safety	8
2.3.1. Electric Motor Safety	9
2.4. Rotating Parts Safety	9
2.5. Rotating Flighting	9
2.6. Overhead Power Lines	10
2.7. Tire Safety	10
2.8. Safety Decals	10
2.8.1. Decal Installation/Replacement	10
2.8.2. Safety Decal Locations and Details	11
3. Assembly	17
3.1. Assembly Safety	17
3.2. Check Shipment	17
3.3. List of Required Tools	17
3.4. Before You Begin	18
3.5. Tubes & Flighting	18
3.6. Track Shoe and Track Stop	20
3.7. Intake Hitch	21
3.8. Driveshaft	22
3.8.1. Procedure 1 - Driveshaft Addition	22
3.8.2. Procedure 2 - Driveshaft Removal	22
3.9. Electric Motor Drive (EMD) Gearbox	24
3.10. Driveshaft Shield	26
3.11. Upper Housing Lubrication	27
3.12. Discharge Spout	28
3.13. Truss	28
3.14. Transport Undercarriage	32
3.15. Winch and Lift Cable	38
3.15.1. Winch Handle	39
3.16. Mounting Motor	40
3.17. Plastic Manual Container	43
3.18. Model Decal Placement	44



TABLE OF CONTENTS

4. Transport & Placement 45
 4.1. Transport & Placement Safety..... 45
 4.2. Transport Procedure..... 46
 4.3. Placement Procedure 47

5. Operation 49
 5.1. Operation Safety..... 49
 5.2. Pre-Operational Checklist..... 51
 5.3. Operating Procedure 51
 5.3.1. Start-Up & Break-In 51
 5.3.2. Operating With A Full Load..... 52
 5.3.3. Shutdown 52
 5.3.4. Lowering & Completion..... 53

6. Maintenance & Storage..... 55
 6.1. Maintenance Safety 55
 6.2. General Maintenance Procedures..... 55
 6.3. Storage Safety..... 57
 6.4. General Storage Procedures..... 57

7. Troubleshooting 59

8. Appendix 61
 8.1. Bolt Torque Values 61


Warranty..... 63

1. Introduction

Thank you for purchasing a Westfield Grain Augers. This equipment will allow safe and efficient operation when you read and follow all of the instructions contained in this manual. With proper care, your Grain Augers will provide you with many years of trouble-free operation.

Keep this manual handy for frequent reference and to review with new personnel. A sign-off form is provided on the inside front cover for your convenience. If any information in this manual is not understood or if you need additional information, please contact your local distributor or dealer for assistance.

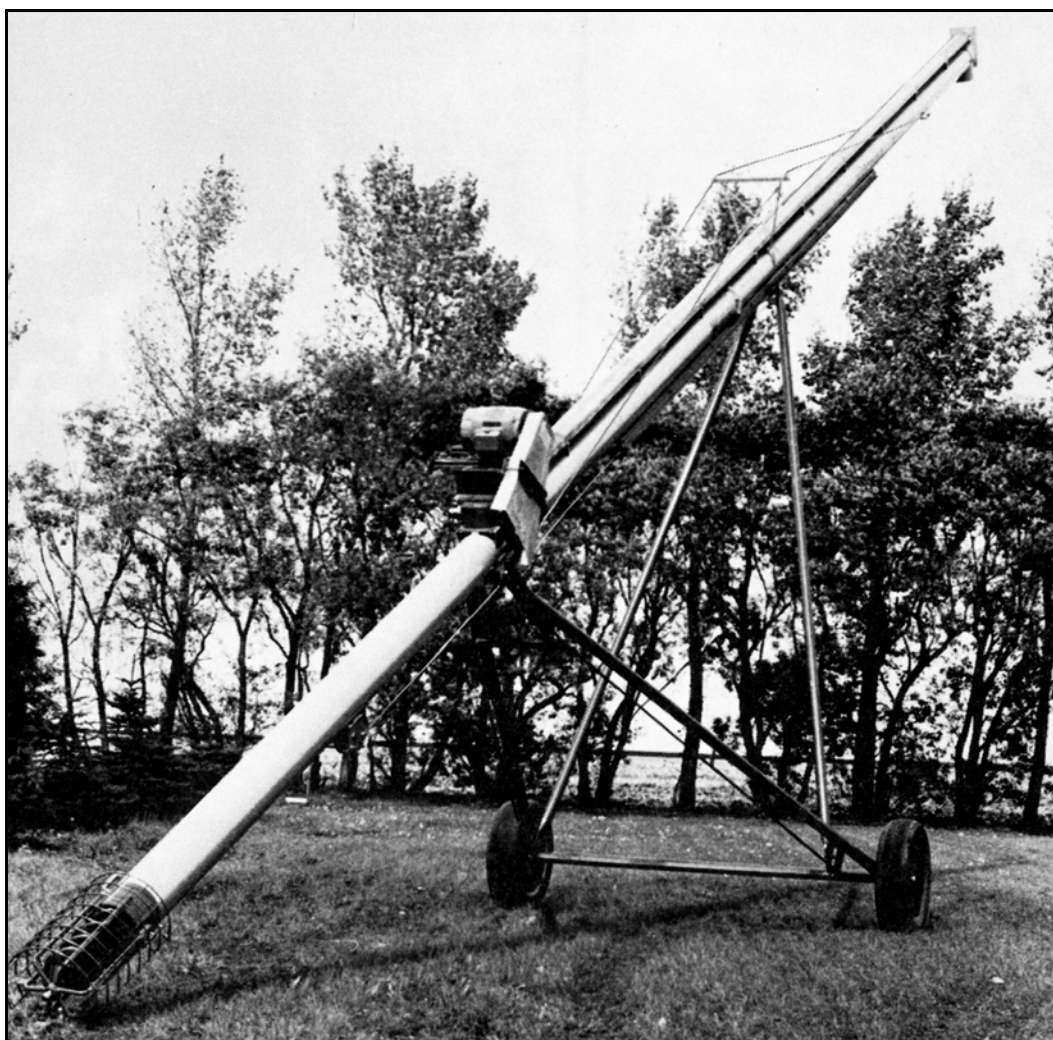This manual should be regarded as part of the equipment. Suppliers of both new and second-hand equipment are advised to retain documentary evidence that this manual was provided with the equipment.



Serial Number:	
If one long tube, serial number is found on the right, in the middle of the tube. If more than one tube, number is on the right, at the top of the lower tube.	

1.1. Equipment Purpose

1.1.1. General Description

Your grain auger is designed to transport dry, free-flowing grains. Treated seed and fertilizer can be safely augered as well; however, when augering fertilizer, special procedures apply as noted in the Operation chapter. The auger must be operated with all guards installed and can be used in any non-extreme weather. Although the auger is designed for on-farm use, it can be transported on public roadways with the addition of a Westfield lighting and marking kit.

1.1.2. Intended Use

This equipment is designed solely for use in customary agricultural or similar operations. Use in any other way is considered as contrary to the intended use. Compliance with and strict adherence to the conditions of operation and maintenance as specified by the manufacturer, also constitute essential elements of the intended use.

This equipment should be operated, maintained, serviced, and repaired only by persons who are familiar with its particular characteristics and who are acquainted with the relevant safety procedures.

Accident prevention regulations and all other generally recognized regulations on safety and occupational medicine must be observed at all times.

Any modifications carried out to this equipment may relieve the manufacturer of liability for any resulting damage or injury.

1.1.3. Misuse

When operating or maintaining the auger, **never**:

- auger material other than dry, free-flowing grains
- enter a grain bin or truck while loading or unloading grain with the auger
- operate the auger empty for extended periods of time
- overfeed or overload the auger
- change the size of the electric motor or pulleys to alter the auger speed
- modify the equipment
- use the auger as a hoist

2. Safety

2.1. Safety Alert Symbol and Signal Words



This safety alert symbol indicates important safety messages in this manual. When you see this symbol, be alert to the possibility of injury or death, carefully read the message that follows, and inform others.

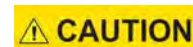
SIGNAL WORDS: Note the use of the signal words **DANGER**, **WARNING**, **CAUTION**, and **NOTICE** with the safety messages. The appropriate signal word for each message has been selected using the definitions below as a guideline.



DANGER Indicates an imminently hazardous situation that, if not avoided, will result in serious injury or death.



WARNING Indicates a hazardous situation that, if not avoided, could result in serious injury or death.



CAUTION Indicates a hazardous situation that, if not avoided, may result in minor or moderate injury.



NOTICE Indicates a potentially hazardous situation that, if not avoided, may result in property damage.

2.2. Basic Operator Safety, Responsibilities, & Qualifications



The safety information found throughout this complete Safety Section of the manual applies to all safety practices. Additional instructions specific to a certain safety practice (such as Operation Safety), can be found in the appropriate section.

YOU are responsible for the **SAFE** use and maintenance of your equipment. **YOU** must ensure that you and anyone else who is going to work around the equipment understands all procedures and related **SAFETY** information contained in this manual.

Remember, **YOU** are the key to safety. Good safety practices not only protect you, but also the people around you. Make these practices a working part of your safety program. All accidents can be avoided.

- It is the equipment owner, operator, and maintenance personnel's responsibility to read and understand **ALL** safety instructions, safety decals, and manuals and follow them when assembling, operating, or maintaining the equipment.
- Equipment owners must give instructions and review the information initially and annually with all personnel before allowing them to operate this product. Untrained users/operators expose themselves and bystanders to possible serious injury or death.
- This equipment is not intended to be used by children.
- Use this equipment for its intended purposes only.
- Do not modify the equipment in any way without written permission from the manufacturer. Unauthorized modification may impair the function and/or safety, and could affect the life of the equipment. Any unauthorized modification of the equipment will void the warranty.



2.2.1. Personal Protective Equipment (Required to be Worn)

Ear Protection

- Wear ear protection to prevent hearing damage.



Work Gloves

- Wear work gloves to protect your hands from sharp and rough edges.



Steel-Toe Boots

- Wear steel-toe boots to protect feet from falling debris.



Safety Glasses

- Wear safety glasses at all times to protect eyes from debris.



Dust Mask

- A dust mask may be needed to prevent breathing potentially harmful dust.



Hard Hat

- Wear a hard hat to help protect your head.



Coveralls

- Wear coveralls to protect skin.



2.2.2. Safety Equipment Required

First-Aid Kit

- Have a properly-stocked first-aid kit available for use should the need arise, and know how to use it.



Fire Extinguisher

- Provide a fire extinguisher for use in case of an accident. Store in a highly visible and accessible place.



2.3. Drives and Lockout Safety

Inspect the power source (drive) before using and know how to shut down in an emergency. Whenever you service or adjust your equipment, make sure you shut down and lock out your power source to prevent inadvertent start-up and hazardous energy release. Know the procedure(s) that applies to your equipment from the following power sources.

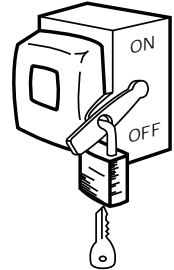
2.3.1. Electric Motor Safety

WARNING

Power Source

- Electric motors and controls shall be installed and serviced by a qualified electrician and must meet all local codes and standards.
- A magnetic starter should be used to protect your motor.
- You must have a manual reset button.
- Reset and motor starting controls must be located so that the operator has full view of the entire operation.
- Locate main power disconnect switch within reach from ground level to permit ready access in case of an emergency.
- Motor must be properly grounded.
- Guards must be in place and secure.
- Ensure electrical wiring and cords remain in good condition; replace if necessary.
- Use a totally enclosed electric motor if operating in extremely dusty conditions.

SERVICE DISCONNECT



Lockout

- The main power disconnect switch should be in the locked position during shutdown or whenever maintenance is performed.
- If reset is required, disconnect all power **before** resetting motor.

2.4. Rotating Parts Safety

WARNING

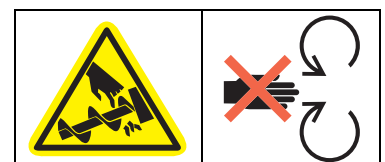
- Keep body, hair, and clothing away from rotating pulleys, belts, chains, and sprockets.
- Do not operate with any guard removed or modified. Keep guards in good working order.
- Shut off and remove key or lock out power source before inspecting or servicing machine.



2.5. Rotating Flighting

DANGER

- KEEP AWAY from rotating flighting.
- DO NOT remove or modify flighting guards, doors, or covers. Keep in good working order. Have replaced if damaged.
- DO NOT operate the equipment without all guards, doors, and covers in place.




- NEVER touch the flighting. Use a stick or other tool to remove an obstruction or clean out.
- Shut off and lock out power to adjust, service, or clean.

2.6. Overhead Power Lines

DANGER

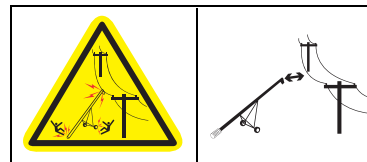- When operating or moving, keep equipment away from overhead power lines and devices.
- This equipment is not insulated.
- Electrocution can occur without direct contact.



2.7. Tire Safety

- Failure to follow proper procedures when mounting a tire on a wheel or rim can produce an explosion that may result in serious injury or death.
- DO NOT attempt to mount a tire unless you have the proper equipment and experience to do the job.
- Have a qualified tire dealer or repair service perform required tire maintenance.
- When replacing worn tires, make sure they meet the original tire specifications. Never undersize the replacement tire.
- DO NOT weld to the tire rim with the tire mounted on the rim. This action may cause an explosion which could result in serious injury or death.
- Inflate tires to the manufacturer's recommended pressure.
- Tires should not be operated at speeds higher than their rated speed.
- Keep wheel lug nuts tightened to manufacturer's recommendations.
- Never reinflate a tire that has been run flat or seriously under-inflated without removing the tire from the wheel. Have the tire and wheel closely inspected for damage before remounting.



2.8. Safety Decals

- Keep safety decals clean and legible at all times.
- Replace safety decals that are missing or have become illegible. See decal location figures that follow.
- Replaced parts must display the same decal(s) as the original part.
- Replacement safety decals are available **free of charge** from your distributor, dealer, or factory.

2.8.1. Decal Installation/Replacement

1. Decal area must be clean and dry, with a temperature above 50°F (10°C).

2. Decide on the exact position before you remove the backing paper.
3. Align the decal over the specified area and carefully press the small portion with the exposed sticky backing in place.
4. Slowly peel back the remaining paper and carefully smooth the remaining portion of the decal in place.
5. Small air pockets can be pierced with a pin and smoothed out using the sign backing paper.

2.8.2. Safety Decal Locations and Details

Replicas of the safety decals that are attached to the equipment and their messages are shown in the figure(s) that follow. Safe operation of the equipment requires that you familiarize yourself with the various safety decals and the areas or particular functions that the decals apply to, as well as the safety precautions that must be taken to avoid serious injury, death, or damage.

Westfield reserves the right to update safety decals without notice. Safety decals may not be exactly as shown.

* Westfield reserves the right to update safety decals without notice. Safety decals may not be exactly as shown.

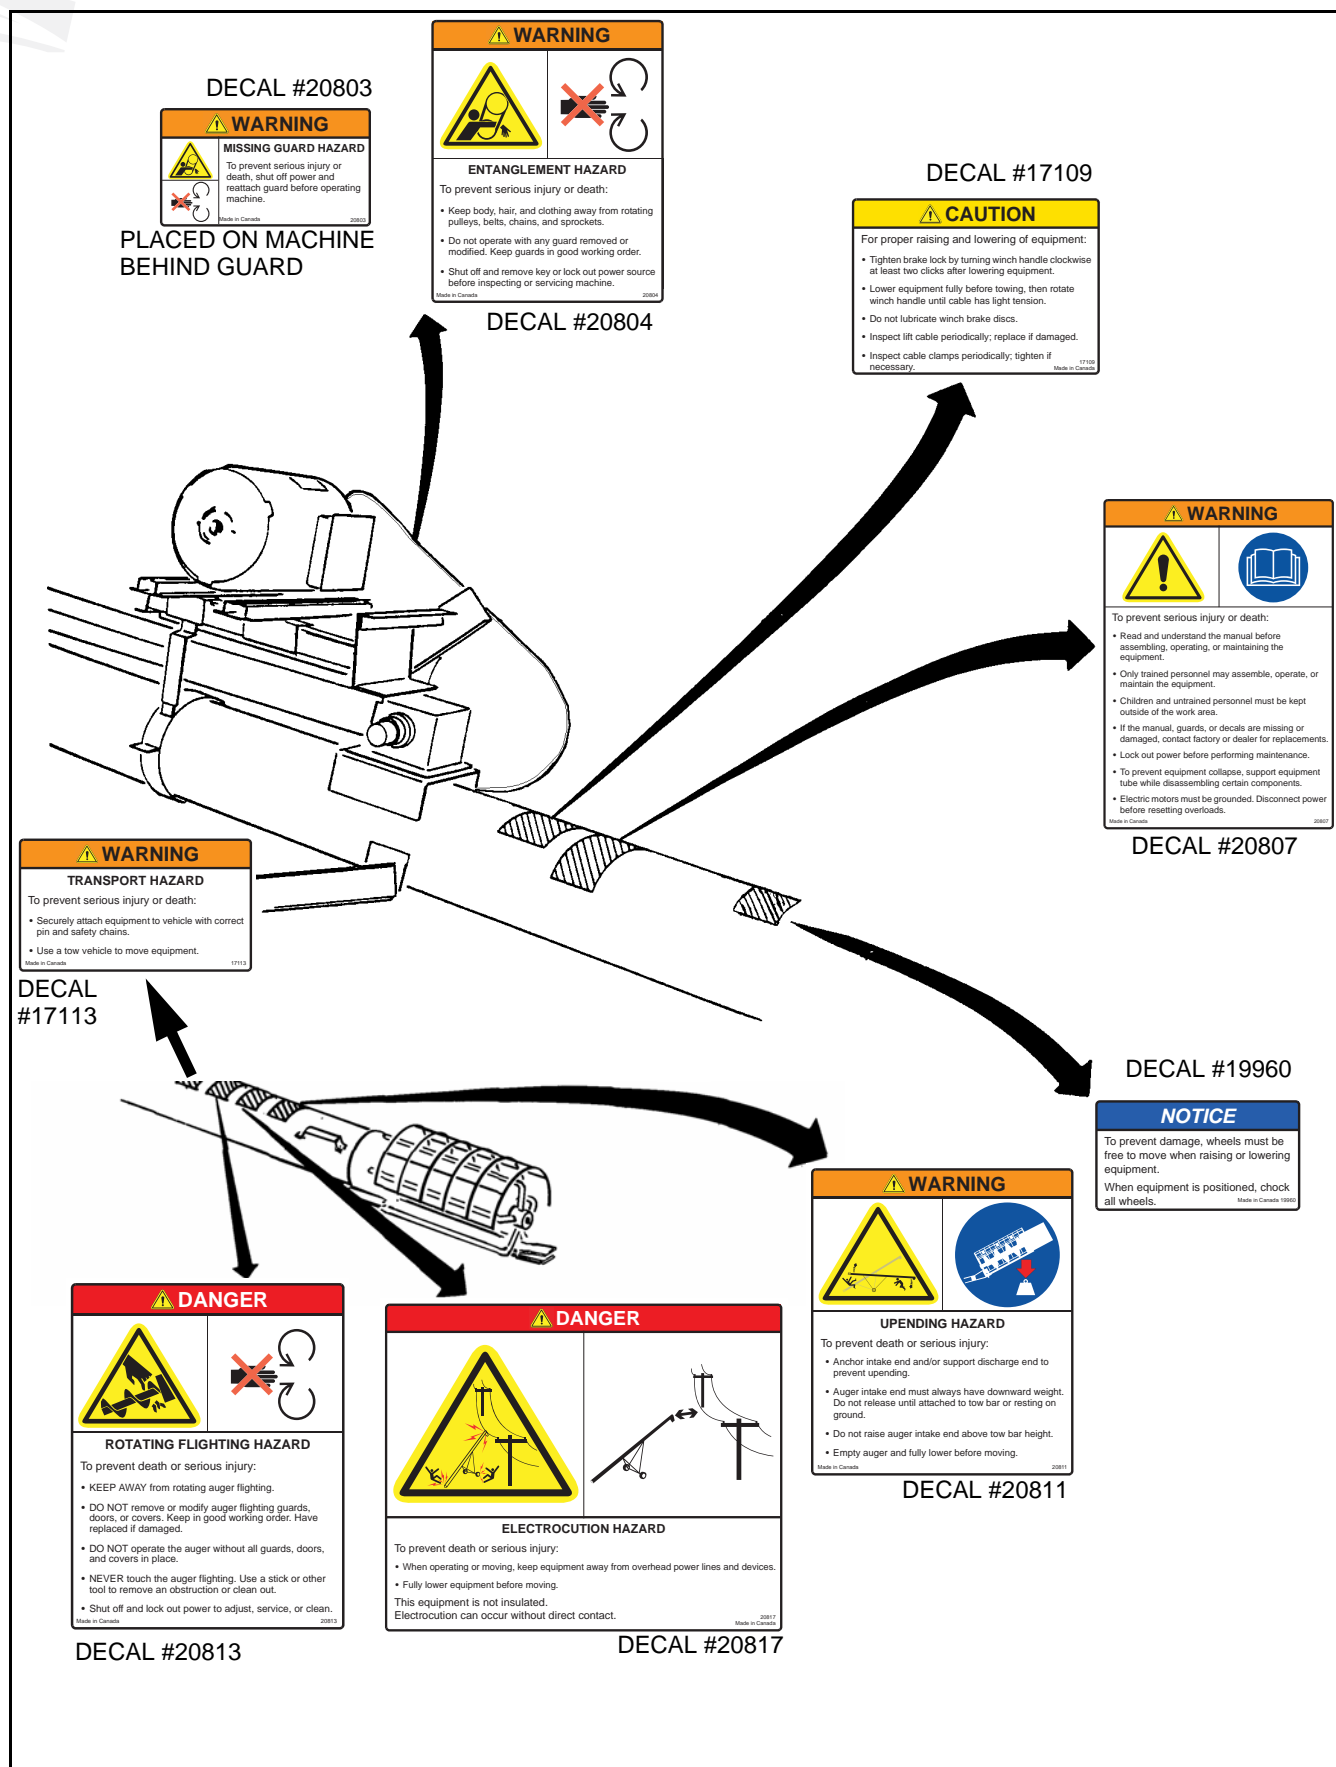


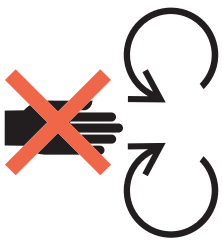


Figure 2.1 Safety Decal Location Diagrams


DANGER


ROTATING FLIGHTING HAZARD


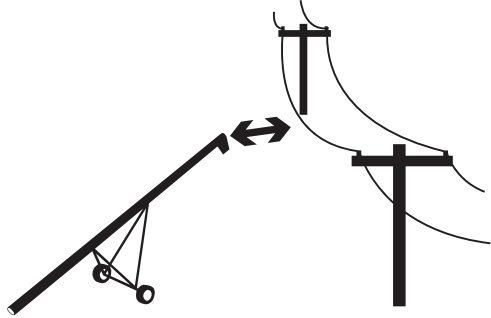
To prevent death or serious injury:

- KEEP AWAY from rotating auger flighting.
- DO NOT remove or modify auger flighting guards, doors, or covers. Keep in good working order. Have replaced if damaged.
- DO NOT operate the auger without all guards, doors, and covers in place.
- NEVER touch the auger flighting. Use a stick or other tool to remove an obstruction or clean out.
- Shut off and lock out power to adjust, service, or clean.

Made in Canada
20813

Decal #20813


DANGER

ELECTROCUTION HAZARD

To prevent death or serious injury:




- When operating or moving, keep equipment away from overhead power lines and devices.
- Fully lower equipment before moving.

This equipment is not insulated.
Electrocution can occur without direct contact.

20817
Made in Canada

Decal #20817

Figure 2.2 Safety Decal Details

 WARNING	
	
<p>To prevent serious injury or death:</p> <ul style="list-style-type: none"> • Read and understand the manual before assembling, operating, or maintaining the equipment. • Only trained personnel may assemble, operate, or maintain the equipment. • Children and untrained personnel must be kept outside of the work area. • If the manual, guards, or decals are missing or damaged, contact factory or dealer for replacements. • Lock out power before performing maintenance. • To prevent equipment collapse, support equipment tube while disassembling certain components. • Electric motors must be grounded. Disconnect power before resetting overloads. 	
Made in Canada	20807

Decal #20807

Decal #20803

 WARNING	
	<p>MISSING GUARD HAZARD</p> <p>To prevent serious injury or death, shut off power and reattach guard before operating machine.</p>
	<p>Made in Canada</p> <p>20803</p>

Decal #17113

 WARNING
<p>TRANSPORT HAZARD</p> <p>To prevent serious injury or death:</p> <ul style="list-style-type: none"> • Securely attach equipment to vehicle with correct pin and safety chains. • Use a tow vehicle to move equipment.
<p>Made in Canada</p> <p>17113</p>

Figure 2.3 Safety Decal Details

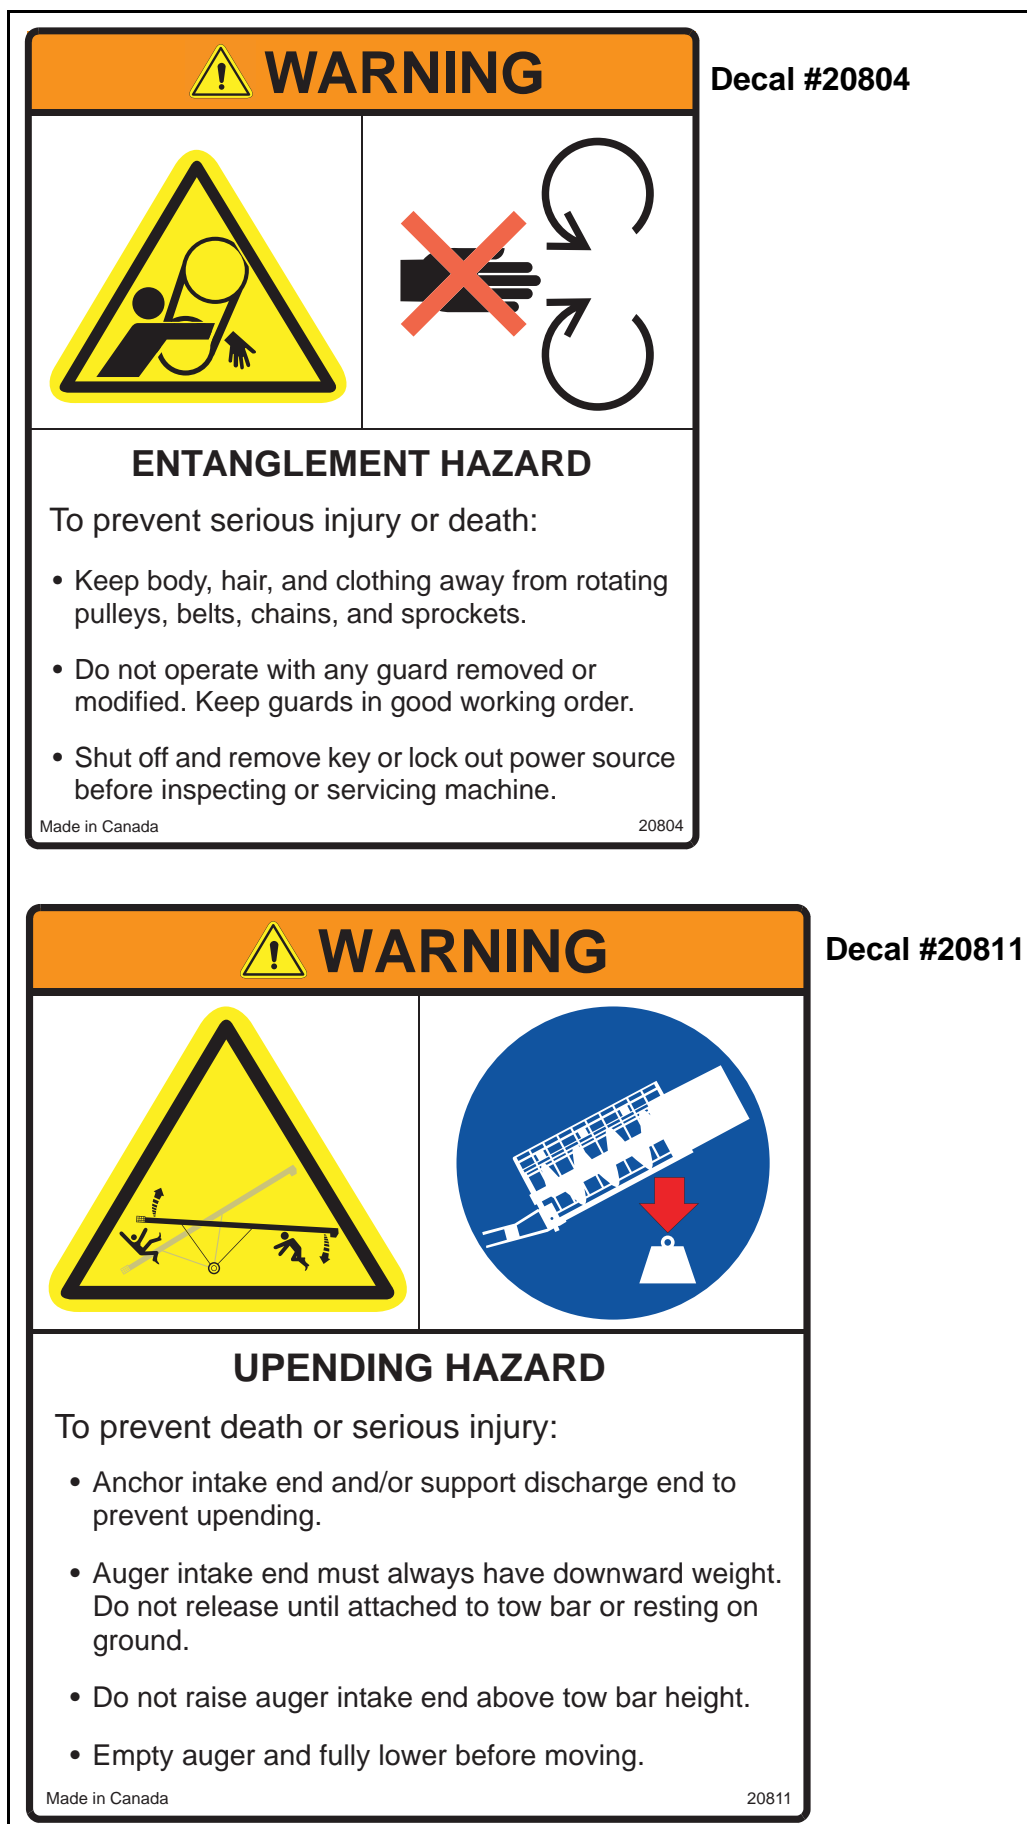


Figure 2.4 Safety Decal Details





CAUTION

Decal #17109

For proper raising and lowering of equipment:

- Tighten brake lock by turning winch handle clockwise at least two clicks after lowering equipment.
- Lower equipment fully before towing, then rotate winch handle until cable has light tension.
- Do not lubricate winch brake discs.
- Inspect lift cable periodically; replace if damaged.
- Inspect cable clamps periodically; tighten if necessary.

17109
Made in Canada

NOTICE

Decal #19960

To prevent damage, wheels must be free to move when raising or lowering equipment.

When equipment is positioned, chock all wheels.

Made in Canada 19960

Figure 2.5 Safety Decal Details

3. Assembly



Before continuing, ensure you have completely read and understood this manual's Safety chapter, in addition to the safety information in the section(s) below.

3.1. Assembly Safety

WARNING

- Do not take chances with safety. The components can be large, heavy, and hard to handle. Always use the proper tools, rated lifting equipment, and lifting points for the job.
- Always have two or more people assembling the equipment.
- Make sure you have sufficient lighting for the work area.
- Tighten all fasteners according to their specifications. Do not replace or substitute bolts, nuts, or other hardware that is of lesser quality than the hardware supplied by the manufacturer.

3.2. Check Shipment

Unload the parts at the assembly site and inspect them thoroughly while comparing the packing slip to the shipment. Ensure that all items have arrived and that none are damaged.

It is important to report missing or damaged parts immediately to ensure that proper credit is received from either the manufacturer or from your distributor/dealer, and to ensure that any missing parts can be shipped quickly to avoid delaying the assembly process.

Note: Do not attempt to assemble or install a damaged component.

3.3. List of Required Tools

- 6-9 support stands (tube section supports, three per tube)
- Four sawhorses (500 lb / 266.7 kg bearing capacity)
- One standard socket set and wrench set
- One torque wrench
- One standard 25' (7.62 m) tape measure
- One 2' level
- One 8" level magnetic
- Two C-clamps or vise grips
- One picker with minimum reach of 12' (3.66 m) and 4000-6000 lb and (1814 - 2722 kg) lifting capacity
- One 100' (30 m) measuring tape
- One tire gauge
- One tire chuck

- 6-10 wood blocks (2x4's or smaller)
- Grease
- Impact wrench and sockets
- 2+ steel punches (for aligning bolt holes)

3.4. Before You Begin

- Perform assembly on a firm and level surface in an area large enough to allow access to all sides of the equipment.
- Before beginning assembly, familiarize yourself with all the sub-assemblies, components, and hardware that make up the equipment.
- Have all parts and components on hand, and arrange them for easy access.
- Separate the hardware (bolts, nuts, etc.) and lay them out into groups for easier identification during assembly.

Note: When options or more than one configuration is available for the equipment and the assembly information varies, additional instructions will be included.



These additional instructions will be indicated with an arrow.

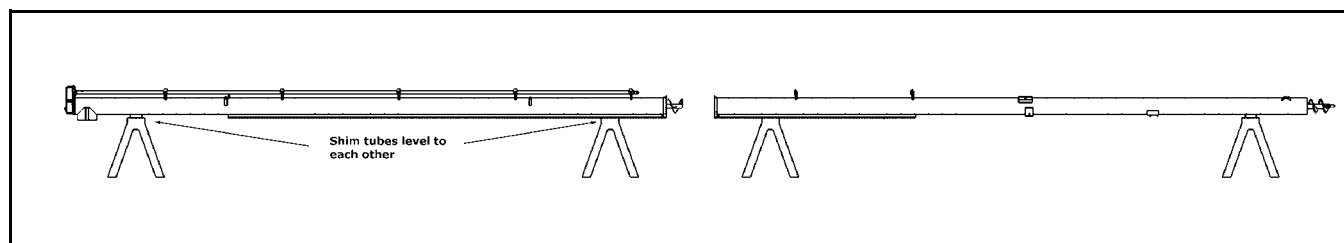
- If assembling inside a building, be sure the ceiling is at least 14' (4.27 m) high to provide clearance when installing the undercarriage.
- Ensure there is adequate space to remove the assembled machine from the assembly area.

3.5. Tubes & Flighting



The 26' model has only one flighting and tube section and does not require assembly.

1. Position tube sections. Align tube sections on a flat surface or on a series of benches.



WARNING

Do not drop. Damage to equipment or serious personal injury will result.

Note: When assembling more than 2 sections, start from spout end and work towards hopper.

2. Screw or slide lower flight shaft onto upper flight shaft until flight ends butt together and flighting spiral matches up. Secure with hardware listed in table below. Repeat, if necessary, for any remaining flight shafts.

3. Slide tube sections together and secure. Make sure to align upper and lower track ends and then tighten bolts. Secure with hardware in table below.

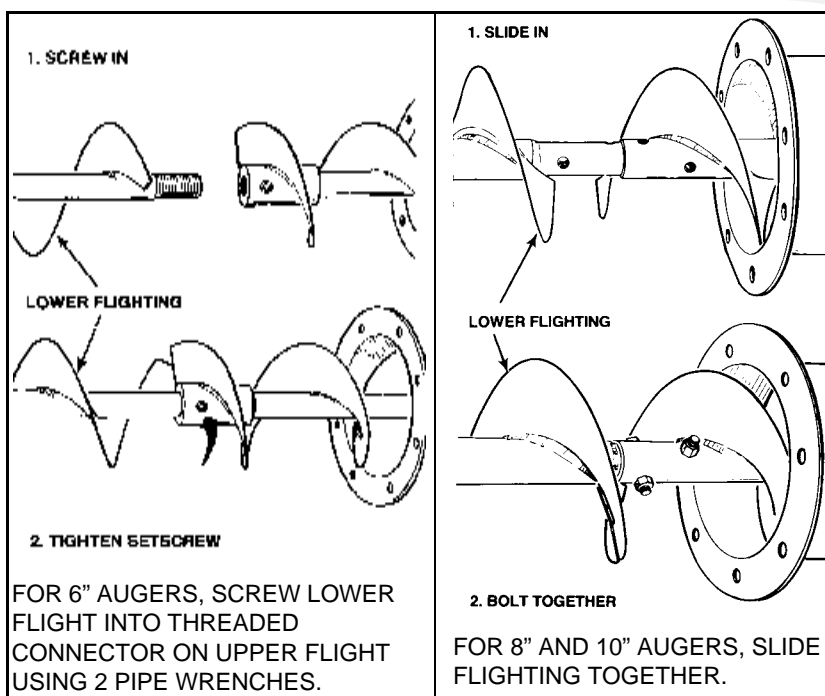


Figure 3.1

Details for fastenings:				
Auger	For Flighting	Qty	For Tubes	Qty
26'	n/a	-	n/a	-
6"	use pipe wrenches set screw	2 1	7/16" x 1" bolts and locknuts	6
8"	7/16" x 2-1/4" GR 8 bolts and locknuts	2	7/16" x 1" bolts and locknuts	8
10"	1/2" x 2-3/4" GR 8 bolts and locknuts	2	7/16" x 1" bolts and locknuts	8

Important: Track ends must align to allow track shoe to smoothly slide over track joint. Misalignment may cause jamming.

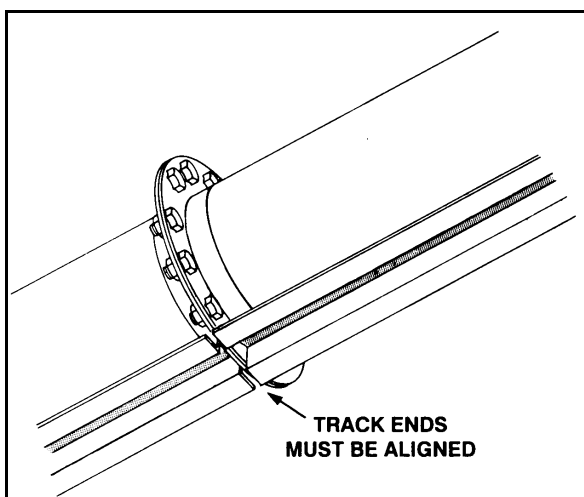


Figure 3.2

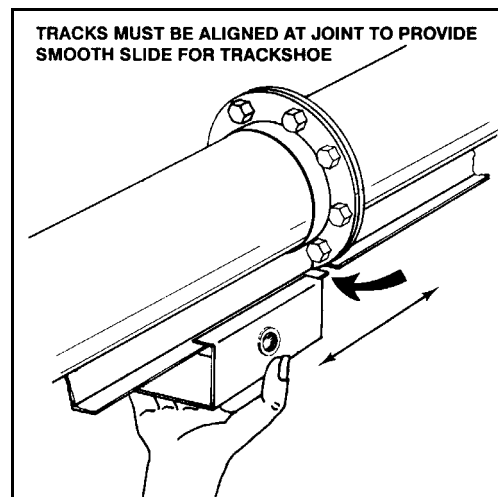


Figure 3.3

3.6. Track Shoe and Track Stop

1. Slide roller track shoe onto track.
2. Attach the upper angle-iron track stop with 7/16" x 1" bolts, heavy flat washers, and locknuts (Figure 3.4). For correct positioning of the upper track stop, see Table 3.1.
3. Attach the lower angle-iron track stop (on 36', 56', and 61' augers) with two 7/16" x 1" bolts and locknuts. For correct positioning of the lower track stop, see Table 3.2.

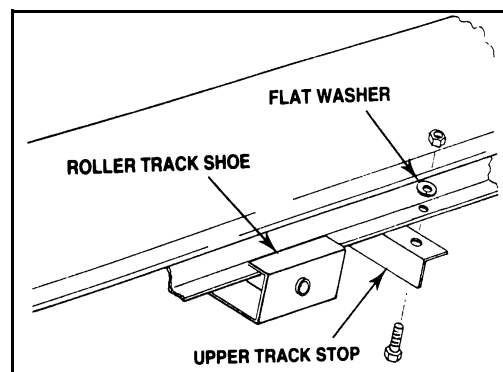


Figure 3.4

Table 3.1 Upper Track Stops^a

Auger Length		Upper Track Stop Locations				
		1st Hole	2nd Hole	3rd Hole	4th Hole	5th Hole
26'	From Discharge End	6"-8"	-	-	-	-
31'		6"-8"-10"	-	-	-	-
36'		-	6"-8"	-	-	-
41'		10"	-	-	6"-8"	-
46'		-	-	-	8"	-
51'		6"	10"	-	-	8"
56'		-	8"	-	-	-
61'		-	6"	8"-10"	-	-
71'		-	-	-	8"-10"	-

- a. Count from upper discharge end of auger. For example, "1st Hole" refers to the first set of holes in the upper end of the track nearest the discharge end.

Table 3.2 Lower Track Stops^a

Auger Length		Lower Track Stop Locations		
		Welded Track Stop	1st Hole	2nd Hole
26'	From Intake End	6"-8"	-	-
31'		6"-8"-10"	-	-
36'		-	6"-8"	-
41'		6"-8"-10"	-	-
46'		8"	-	-
51'		6"-8"-10"	-	-
56'		-	-	8"
61'		6"	8"-10"	-
71'		8"-10"	-	-

- a. Count from the lower intake end of auger. For example, "1st Hole" refers to the first set of holes in the lower end of the track nearest the intake end.

CAUTION Failure to locate track stops in the proper holes can result in damage to auger and/or personal injury.

4. Slide track shoe along full length of track to make certain there is no binding and that track ends are properly aligned. The upper and lower tracks must be aligned to allow track shoe to roll smoothly over this joint (Figure 3.3).

3.7. Intake Hitch

1. Clean dirt and paint from lower flight stub and intake bushing.
2. Attach intake hitch to lower auger tube and tighten securely.
3. Maintain 1/4" (0.64 cm) clearance between bushing and end of flight.
4. Attach clevis to intake hitch with clevis pin and gripclip.

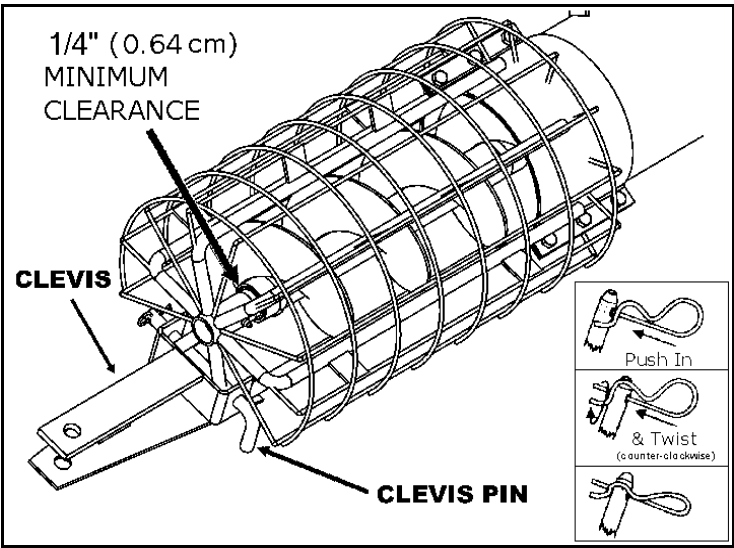


Figure 3.5

Part	Size	Qty
Intake Hitch	7/16" x 1" bolt and locknut	6
Clevis Pin	5/8" for the 8" auger 3/4" for the 10" auger	1

3.8. Driveshaft

The installation procedure for the driveshaft and gearbox assembly on the EMD auger depends on the size and length of the auger.

Because most of the driveshaft is pre-installed, consult Figure 3.6 before proceeding with the assembly of your auger.

Since the length of the driveshaft determines the location of the gearbox, it is very important that the length is correct for the corresponding auger.



Driveshafts on the 10" x 51', 61', and 71' augers require a square key. All other augers use Woodruff (half-moon shaped) keys.

3.8.1. Procedure 1 - Driveshaft Addition



For all 6" and all 8" augers up to and including 51', and the 71' augers. (For other sizes, see Procedure 2 on the next page.)

For additional driveshaft segment(s), proceed as follows (see Figure 3.6):

1. Clean dirt and/or paint from driveshaft ends and from inside shaft connector(s).
2. Slide shaft connector halfway onto the last pre-installed driveshaft segment.
3. Slip the lower driveshaft segment through the bearings on the lower tube section. Install a key and slide the shaft into the shaft connector.
4. Repeat for augers with two driveshaft additions.

Note: A 16' 4" (4.98 m) driveshaft segment is strapped to the lower tube on the 8" x 71' auger. **Do not use.** This auger requires a 19" (48.3 cm) addition only.

5. Tighten all set screws on shaft connectors.
6. Place a few drops of oil at each driveshaft bearing to allow for break-in.

Note: The 6" x 61' auger does not require driveshaft addition or removal. This auger requires the removal of the first driveshaft bearing above the gearbox.

3.8.2. Procedure 2 - Driveshaft Removal



Includes 8" x 56' and 61' augers, and 10" x 31', 41', 51', 61', 71' augers.

For removal of a driveshaft segment, proceed as follows (see Figure 3.6):

Note: All required driveshafts are pre-installed and the lower driveshaft section is split.

Remove the segment nearest the intake end (as indicated in Figure 3.6), and remove the shaft connector. The driveshaft length to be deleted is as follows:

- 8" x 56' - Remove driveshaft segment at 6' 4" (1.92 m)
- 8" x 61' - Remove driveshaft segment at 6' 4" (1.92 m)
- 10" x 31' - Remove driveshaft segment at 3' 10" (1.16 m)
- 10" x 41' - Remove driveshaft segment at 5' 2-1/2" (1.58 m)
- 10" x 51' - Remove driveshaft segment at 9' 9" (2.97 m)
- 10" x 61' - Remove driveshaft segment at 6' 4" (1.92 m)

The 10" x 71' auger requires:

- the removal of the lower pre-installed driveshaft segment (16'4" / 4.98 m)
- the installation of a 19" (48.3 cm) segment in its place

Note: The 8" and 10" x 61' augers have an additional 6'4" driveshaft segment shipped/included as a separate piece. **Do not use these driveshafts.** These augers require the removal of the first driveshaft bearing above gearbox.

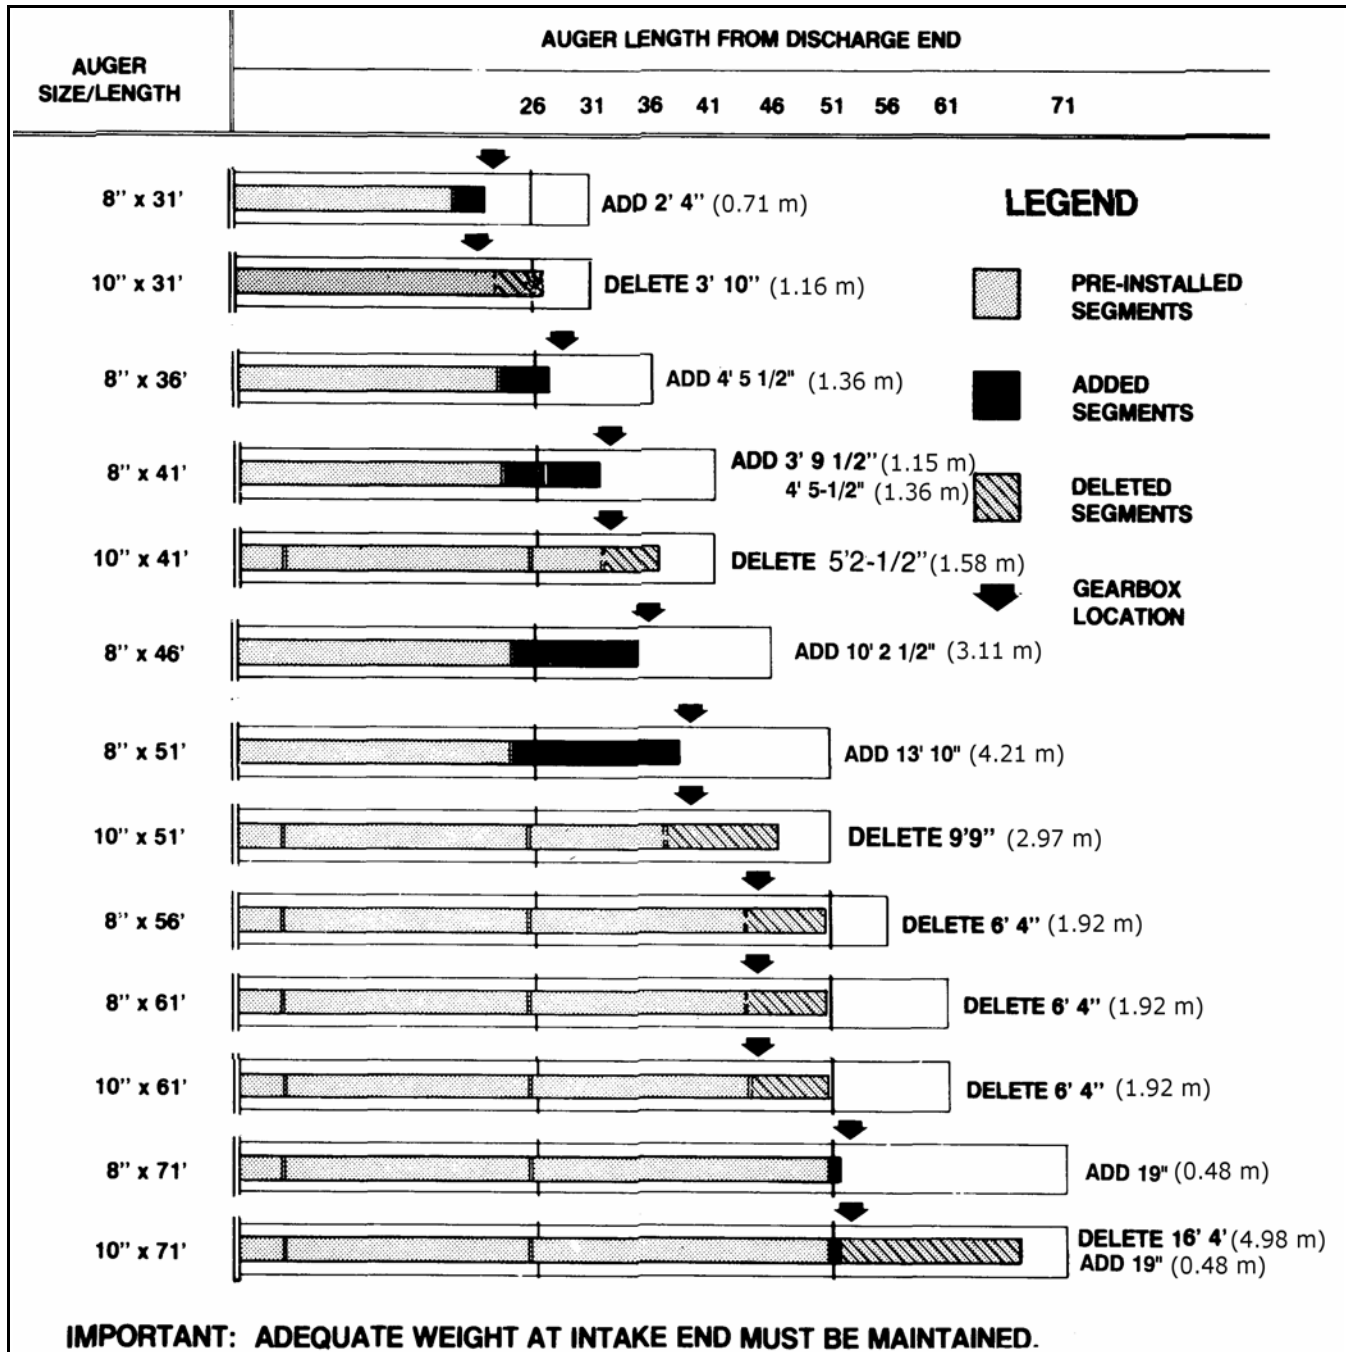


Figure 3.6

3.9. Electric Motor Drive (EMD) Gearbox

The EMD auger uses one of three gearbox assembly combinations depending on the size of the auger. The assembly is shipped with the appropriate mounting plate or gearbox mount and chain coupler in place.



Gearbox mounting procedure for the following augers:

- 6"-8" x 26'
- 6"-8" x 31'

See Figure 3.7.

1. Remove chain and secure half of the chain coupler to the driveshaft using a Woodruff key.
2. Place gearbox assembly on auger tube leaving a minimum 1/16" (1.6 mm) clearance between chain coupler sprockets.

Important: Maintain a minimum 1/16" (1.6 mm) clearance between chain coupler sprockets.

3. Secure gearbox assembly to auger tube with half tube clamps and four 7/16" x 1" bolts and locknuts.

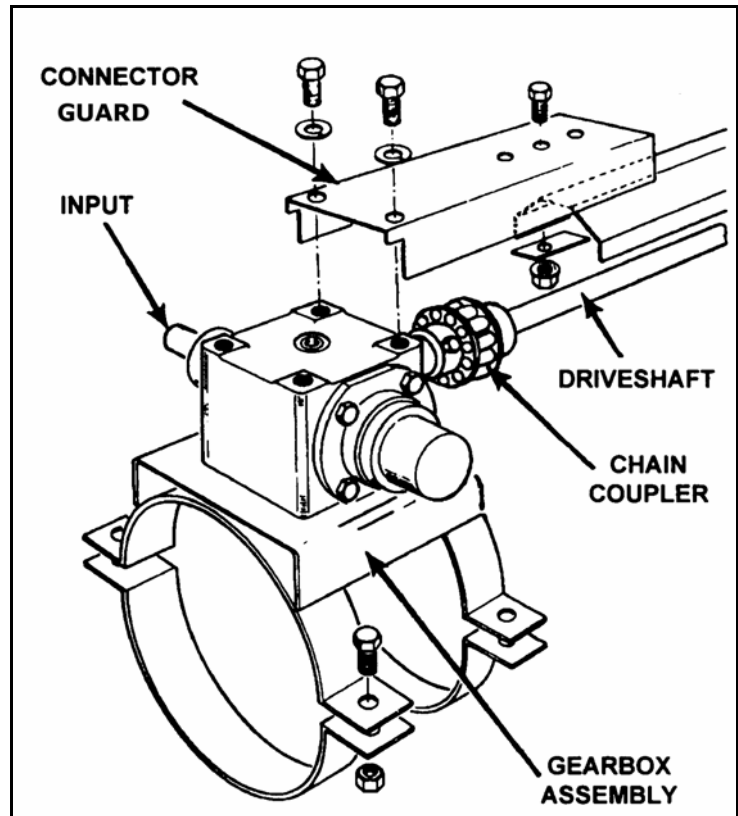


Figure 3.7

Note: The gearbox input on all 26' and 31' augers (excepting the 10" x 31') is located on the left side of the auger.



Gearbox mounting procedure for the following augers:

- 6"-8" x 36'
- 6"-8" x 41'
- 8" x 46'
- 6"-8" x 51'
- 6" x 61'

See Figure 3.8.

1. Remove chain and secure half of the chain coupler to the driveshaft using a Woodruff key.
2. Place gearbox assembly with mounting plate onto the mounting bracket welded to lower tube and secure with four 7/16" x 1" bolts and locknuts.

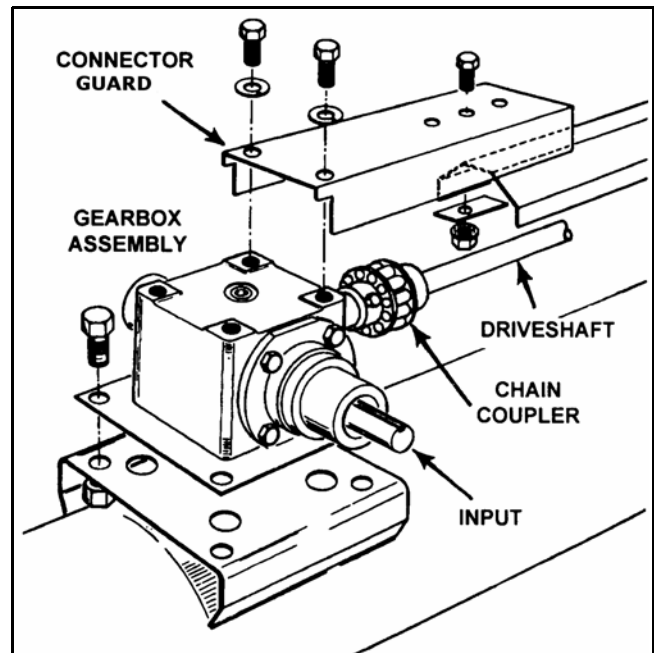


Figure 3.8

Note: Maintain a minimum 1/16" (1.6 mm) clearance between chain coupler sprockets.



Gearbox mounting procedure for the following augers:

- 8" x 56'-61' -71'
- All 10" augers

See Figure 3.9.

1. These augers are equipped with chain couplers. Remove chain and secure half the chain coupler to the driveshaft. Use a Woodruff key on 8" augers and a 1/4" x 1-1/2" square key on 10" augers.
2. Place gearbox assembly on auger tube. Reinstall chain leaving a 1/16" (1.6 mm) clearance between chain coupler sprockets.
3. Secure gearbox assembly to auger tube with half tube clamps and four 7/16" x 1" bolts and locknuts.
4. After mounting gearbox assembly, adjust sprocket clearance to approximately 1/16" (1.6 mm). Tighten set screw.

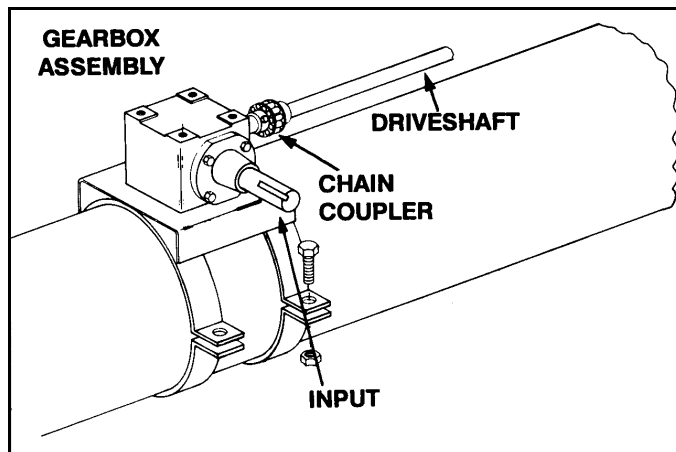


Figure 3.9

CAUTION Ensure that gearbox assembly is mounted in the proper location (Figure 3.6). Failure to properly locate gearbox will result in an unsafe operating condition.

Important: Add EP90 lube oil to the gearbox before operating auger. Failure to do so will void warranty. Do not overfill. Fill half full only.

Auger	Oil Requirements
all 6"	224 mL (8 fl oz)
8" (up to and incl. the 51')	
8" (56' and up)	700 mL (25 fl oz)
all 10"	

3.10. Driveshaft Shield

1. First, install the chain coupler guard, then install the driveshaft shields, working from gearbox assembly to discharge end. Refer to Table 3.3 for the proper sequence.
- ➡ 2. Attach chain coupler guard on all 6" augers, as well as 8" augers up to and including 51':
 - a. Attach shield to gearbox as shown in Figure 3.7 and 3.8 with two 3/8" x 3/4" bolts and lockwashers.
 - b. Attach the first driveshaft shield to the shield with one 1/4" x 1/2" bolt, a washer-locknut, and a punched flat iron plate.
- ➡ 3. Attach chain coupler guard on 8" x 56'-61'-71' and all 10" augers:
 - a. Attach the chain coupler guard to gearbox base with two 3/8" x 3/4" bolts and locknuts (Figure 3.10).
 - b. Position the first driveshaft shield on top of the chain coupler guard and against the gearbox to fully cover the coupler and shaft.
 - c. Secure driveshaft shield to the chain coupler guard with a guard strap and 2 self-tapping screws.
4. To install the remainder of the driveshaft guarding, work from the bottom up, overlapping at the bearing brackets (Figure 3.11).
5. Fasten with guard strap and self-tapping screws. Do not tighten until all shielding is in place.

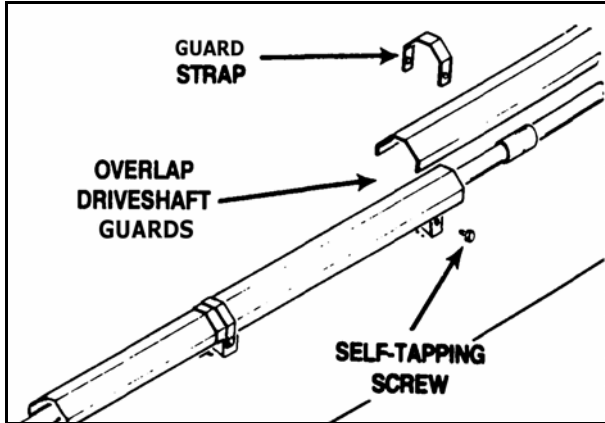


Figure 3.11

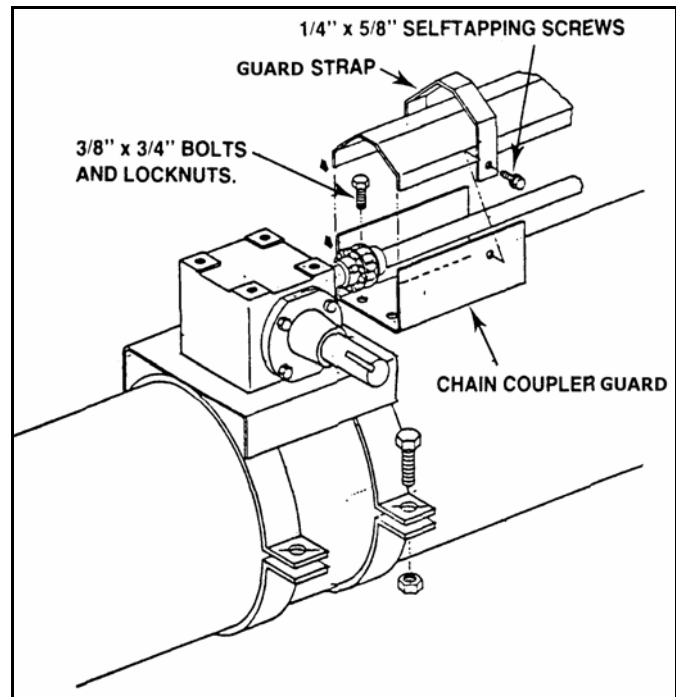


Figure 3.10

Table 3.3 Driveshaft Shielding Sequence

Auger Size/ Length	Step 1		Step 2		Step 3		Step 4	
	Qty	Length	Qty	Length	Qty	Length	Qty	Length
6"/8" x 26'	1	24" (0.61 m)	1	42" (1.07 m)	2	48" (1.22 m)	1	42" (1.07 m)
6"/8" x 31'	1	24" (0.61 m)	1	42" (1.07 m)	3	48" (1.22 m)	1	42" (1.07 m)
10" x 31'	1	42" (1.07 m)	5	48" (1.22 m)	1	42" (1.07 m)	--	--
6"/8" x 36'	1	48" (1.22 m)	1	42" (1.07 m)	4	48" (1.22 m)	1	42" (1.07 m)
6"/8" x 41'	2	48" (1.22 m)	1	42" (1.07 m)	4	48" (1.22 m)	1	42" (1.07 m)
10" x 41'	1	24" (0.61 m)	2	42" (1.07 m)	5	48" (1.22 m)	1	42" (1.07 m)
8" x 46'	3	42" (1.07 m)	4	60" (1.52 m)	1	48" (1.22 m)	--	--
6"/8" x 51'	1	48" (1.22 m)	6	60" (1.52 m)	1	48" (1.22 m)	--	--
6" x 61'	1	48" (1.22 m)	7	60" (1.52 m)	1	48" (1.22 m)	--	--
10" x 51'	1	24" (0.61 m)	8	48" (1.22 m)	1	42" (1.07 m)	--	--
8" x 56'	10	48" (1.22 m)	1	42" (1.07 m)	--	--	--	--
8"/10" x 61'	1	24" (0.61 m)	10	48" (1.22 m)	1	42" (1.07 m)	--	--
8"/10" x 71'	1	42" (1.07 m)	12	48" (1.22 m)	1	42" (1.07 m)	--	--

3.11. Upper Housing Lubrication

Fill enclosed upper drive housing with grease.

WR60	550 g	20 oz
WR80 x 26' - 51'	750 g	26 oz
WR80 x 56' - 71'	900 g	32 oz
WR100	1100 g	40 oz

For continuous use in extreme cold conditions, semi-fluid arctic grease or heavy oil may be used.

3.12. Discharge Spout



Some augers are equipped with weld-on discharge spouts.

Attach discharge spout with half tube clamps and 7/16" x 1-3/4" bolts and locknuts as required.

If a safety spout is being used with this auger, the safety release door should be on the left side of the auger, as determined when standing at intake facing the discharge end.

3.13. Truss

See Figure 3.12, 3.13, 3.14, and 3.15.

1. Fasten lower truss anchor to bracket.

- use two 7/16" x 1" bolts and locknuts.



- On 6" x 61' augers, fasten lower truss anchor to 10' lower tube section (see Figure 3.14 for location).

2. Fasten the center truss support bracket on 46' and 51' augers with two 7/16" x 1" bolts and locknuts (Figure 3.13).



- The 56' and 61' augers require 2 center truss support brackets, each fastened with two 7/16" x 1" bolts and locknuts.



- The 6" x 61' augers require 3 center truss support brackets, each fastened with two 7/16" x 1" bolts and locknuts.



- The 71' auger requires a high truss support center bracket located between the 2 standard support brackets. Fasten with two 7/16" x 1" bolts and locknuts (Figure 3.14).

3. Attach eyebolt to one end of truss cable with two 5/16" cable clamps. Insert eyebolt into lower truss anchor and thread on nut a short way.

Important: On the 8" x 56' augers, the truss cable must be threaded through the reach-arm bracket as shown in Figure 3.12 and then attached to the eyebolts at the lower truss anchor.

4. Pull truss cable over truss support brackets, around upper truss anchor and back over truss support brackets to lower truss anchor, holding it loosely in place with one 5/16" cable clamp at upper truss anchor, and two 5/16" cable clamps at each truss support bracket.

Important: Do not tighten cable clamps at this time.

5. The upper end of augers equipped with truss cables should have an upward bow before being placed on the transport undercarriage (auger tube will straighten when fully assembled). Place supports under the discharge end until upward bow is correct.

- The upward bow should be about 2" (5.01 cm) on the 46' and 51', 3" (7.62 cm) on the 56' and 61', and 5" (12.7 cm) on the 71' auger.

6. Place other eyebolt onto lower truss anchor and thread on nut a short way.

7. Insert other end of truss cable through this eyebolt. Pull out all slack and secure with a cable clamp.

8. Tighten eyebolts to take remaining slack out of truss cable and to maintain the appropriate upward bow. After tension is adjusted, tighten cable clamps on truss support brackets and upper truss anchor. Check for proper side alignment.

Important: Once auger is fully assembled, adjust truss cables on all units (because of initial stretching). Cables may also require adjustment for side alignment.

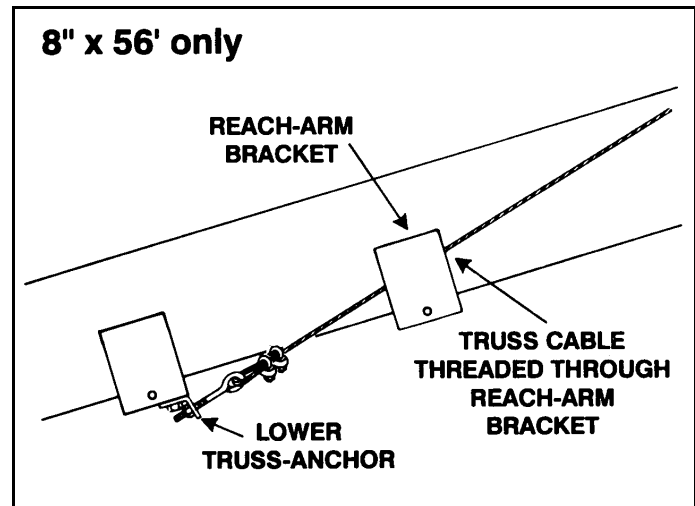


Figure 3.12

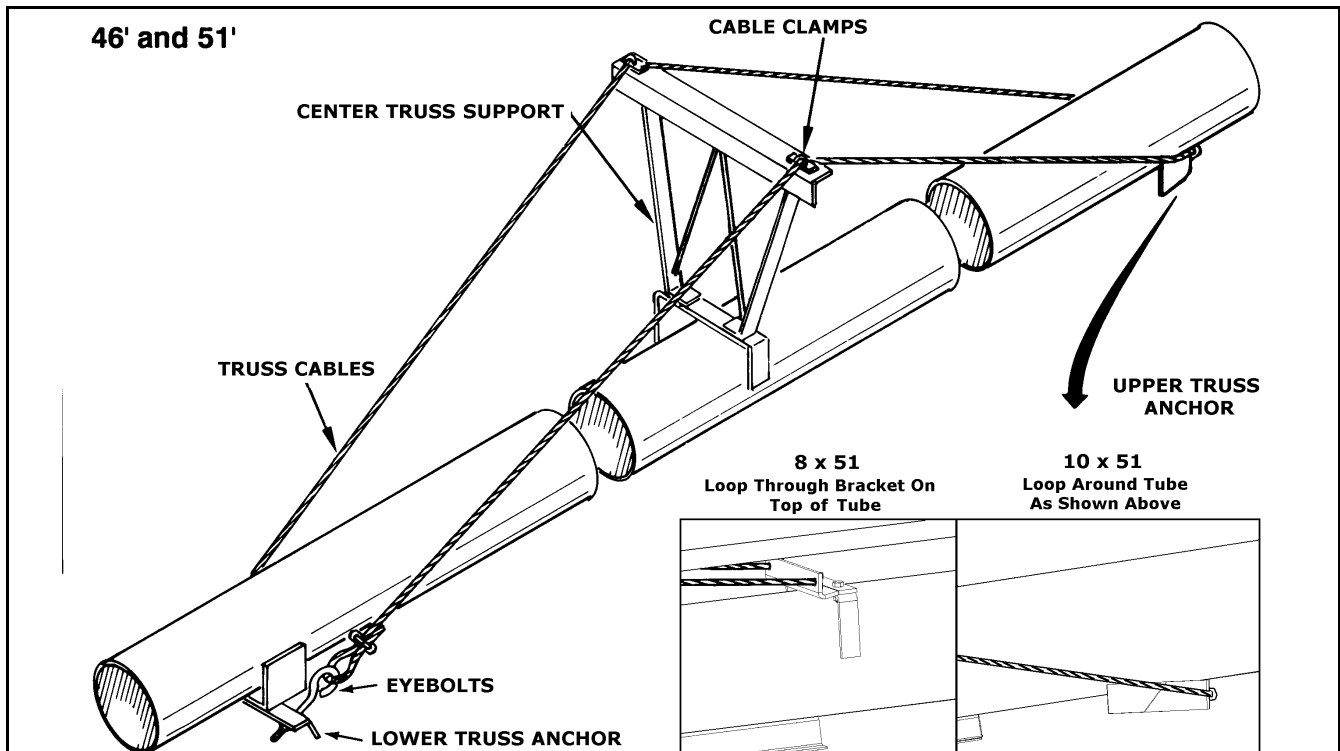


Figure 3.13

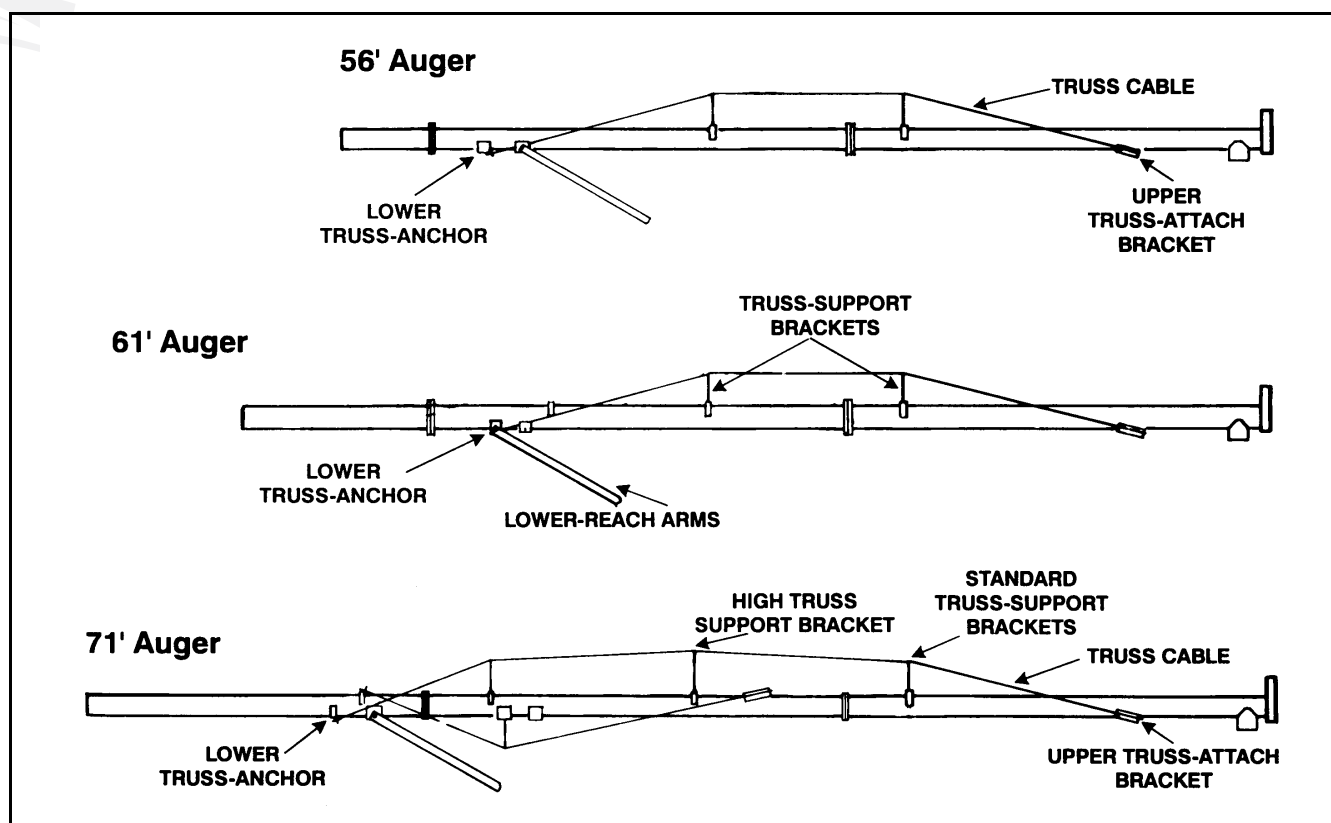


Figure 3.14

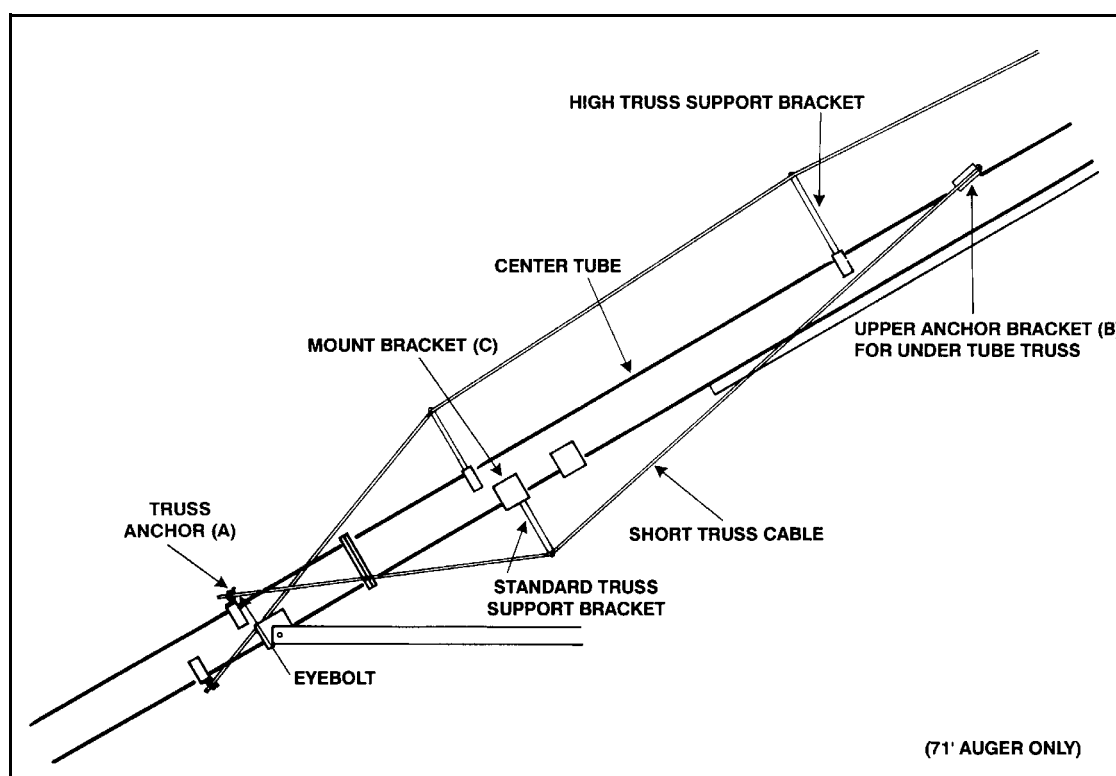


Figure 3.15



9. For 71' augers only (Figure 3.15):

- Fasten short truss anchor (A) to lower auger tube with 7/16" x 1" bolts and locknuts.

- b. Fasten high truss support bracket to mount (C) on bottom of center tube with 7/16" x 1" bolts and locknuts.
- c. Attach eyebolt to one end of truss cable with two 5/16" cable clamps, then insert eyebolt into short truss anchor and thread on nut a short way.
- d. Pull truss cable over truss support bracket, around upper truss anchor (B) and back over truss support bracket to short truss anchor, holding it loosely in place with one cable clamp at upper truss anchor and 2 cable clamps at truss support bracket.
- e. Place other eyebolt into short truss anchor and thread nut on a short way.
- f. Insert other end of truss cable through this eyebolt. **Pull out all slack** and secure with two 5/16" cable clamps.
- g. Tighten eyebolt to take remaining slack out of truss cable and adjust tension to keep auger tube straight. Tighten cable clamps on truss support bracket and upper truss anchor.

Important: Once auger is fully assembled, adjust truss cables on all units (because of initial stretching). Cables may also require adjustment for side alignment.

3.14. Transport Undercarriage

1. To assemble undercarriage, fasten the lower reach arms to axle with three 7/16" x 1" bolts and locknuts on each side.
➡
 - The 10" x 51' auger and all 56', 61' and 71' augers require 1/2" x 1-1/4" bolts and locknuts.
2. Attach long cross-member to bottom of undercarriage brackets as shown in Figure 3.16, with two 7/16" x 1" bolts and locknuts.
➡
 - The 56', 61', and 71' augers require 1/2" x 1-1/4" bolts and locknuts.
3. 8" and 10" augers only: attach the short crossmember to lower reach arms with two 1/2" x 1-1/4" bolts and locknuts.
➡
 - To perform this step, see step "a." on page 34.

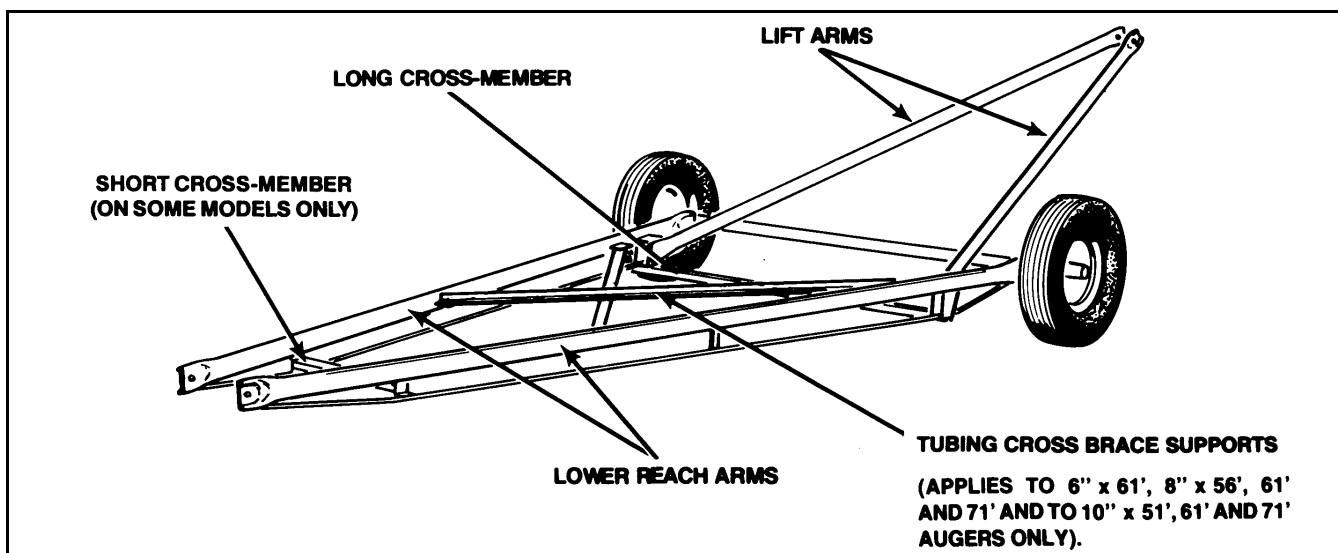


Figure 3.16

- ➡ 4. The 6" x 51', 8" x 36', 41', 46', and 51' augers, and the 10" x 41' augers require extension arms attached to the lower reach arms (Figure 3.17). Fasten with two 7/16" x 1" bolts and locknuts and two 5/8" x 1-1/2" bolts and locknuts.
- ➡ 5. This step applies only to 6" x 61', 8" x 56'-61'-71' and 10" x 51'-61'-71' augers. Install tubing cross brace supports to the welded brackets on lower reach arms with five 1/2" x 1-1/4" bolts and locknuts.
6. Wheel hub assembly:
 - a. Remove any dirt or paint from spindle and hub.
 - b. Thoroughly pack wheel bearings and cups with a good grade of bearing grease.
 - c. Place large bearing into hub and carefully tap in seal.
 - d. Slip hub onto spindle and insert small bearing.
 - e. Tighten slotted spindle nut until hub drags slightly. Back off nut about 1/4 turn until hub turns freely.
 - f. Install cotter pin and dust cap.

Note: Installing tires may not leave you with enough clearance to position and attach undercarriage once auger tube is raised. If so, install wheels after assembly is complete.

g. Check that pressure of pre-inflated tires matches pressure indicated on tire sidewall. Mount wheels on hubs and attach with six 1/2" x 1-3/4" wheel bolts.

7. Fasten upper lift arms to lower reach arms with 5/8" x 1-1/2" bolts and locknuts. **Do not overtighten.** Tighten snug only. These bolts act as pivot points.

- The 6" x 61', 8" x 56'-61'-71' and the 10" x 51'-61'-71' augers require 3/4" x 2" bolts and locknuts.


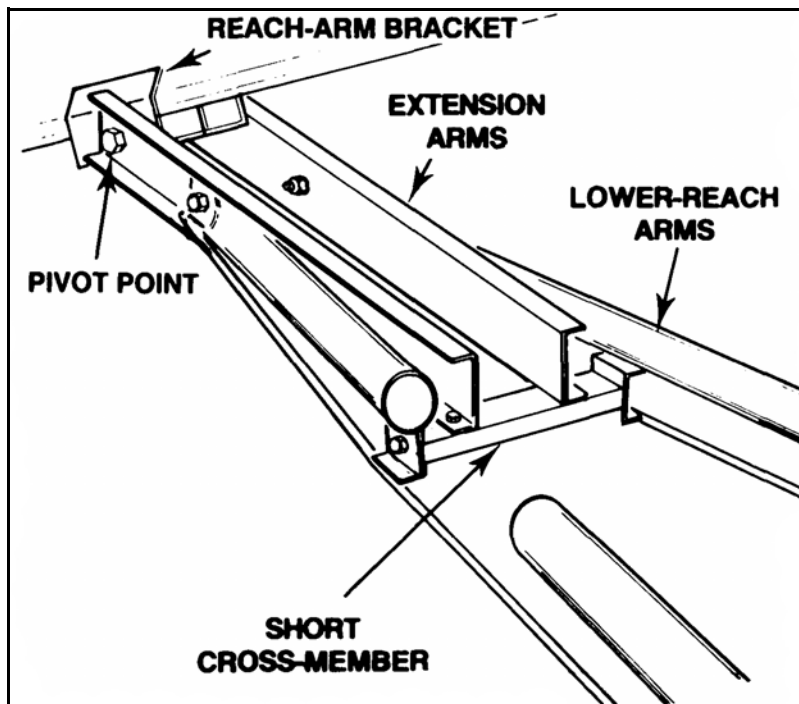


Figure 3.17

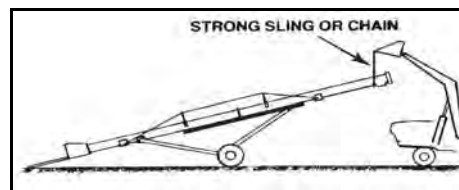8. Raise the discharge end of auger with a front end loader and a strong sling/chain or block and tackle. The height should be sufficient to clear undercarriage assembly.



WARNING Do not remove tube support until auger is fully assembled.

9. Position transport undercarriage beneath tube assembly and attach lower reach arms (Figure 3.18) or extension arms (Figure 3.17) to reach arm bracket on bottom tube with 5/8" x 1-1/2" bolts and locknuts. **Do not overtighten.** Tighten snug only; these bolts act as pivot points.

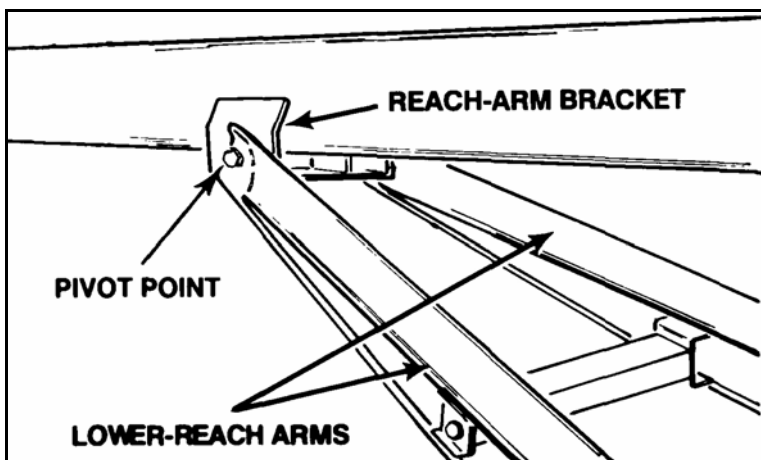


Figure 3.18

- The 6" x 61', 8" x 56'-61'-71' and the 10" x 51'-61'-71' augers require 3/4" x 2" bolts and locknuts.

10. Add the Stabilizer Kit to the 8" and 10" augers.

- a. Attach short cross-member to small frame brackets loosely with two 1/2" x 1-1/2" bolts and locknuts, sandwiching the flat braces (B) between the short cross-member and small frame braces on each side (Figure 3.19).

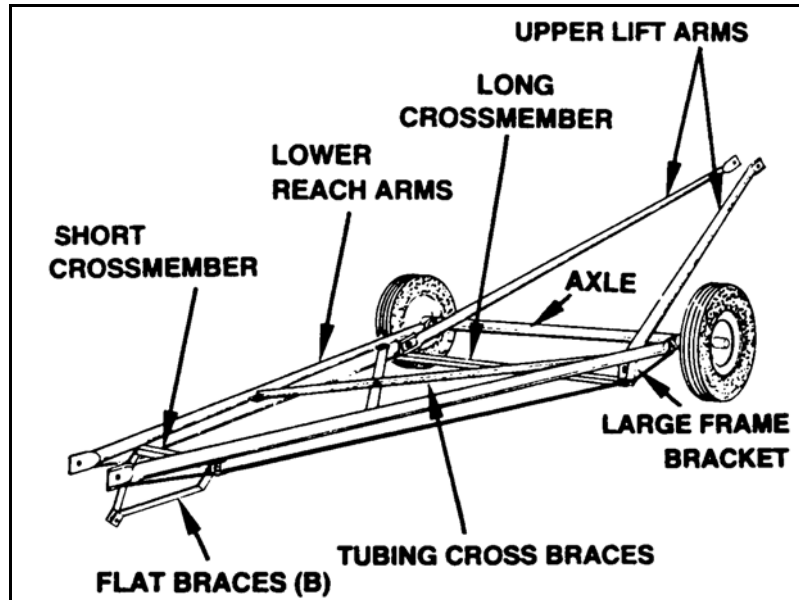


Figure 3.19

- b. Place undercarriage beneath the tube assembly, then position stabilizer braces (A) as shown in Figure 3.20-3.22 and attach lower reach arms to reach arm bracket welded on lower end of auger tube with two 3/4" x 2" bolts and locknuts. **Do not overtighten.** Tighten snug only; these bolts act as pivot points.
- c. Next, fasten the two stabilizer brackets to each other using a 7/16" x 1" bolt. What hole this bolt goes in varies by model.
- If the auger is 8" x 26', 31', 36', 41', 46', 51' or 10" x 31', 41', then this bolt goes in the hole nearest the discharge unless your auger also uses frame extensions.
 - If the auger uses frame extensions, then use the hole nearest the intake.
 - For all other sizes, the first bolt always goes into the hole nearest the intake.
- d. Next, fasten the stabilizer braces to the stabilizer brackets using a 7/16" x 1-3/4" bolt and locknut through the remaining hole.

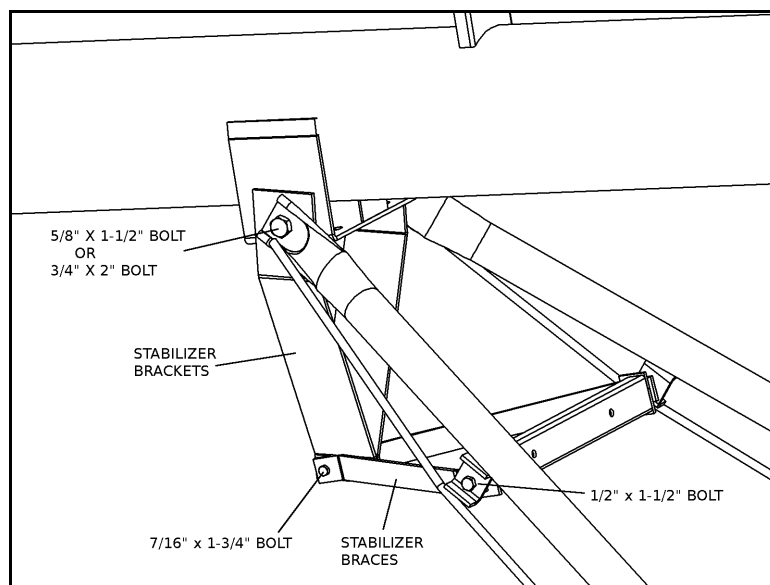


Figure 3.20 For 8" x 26', 31', and 10" x 31'

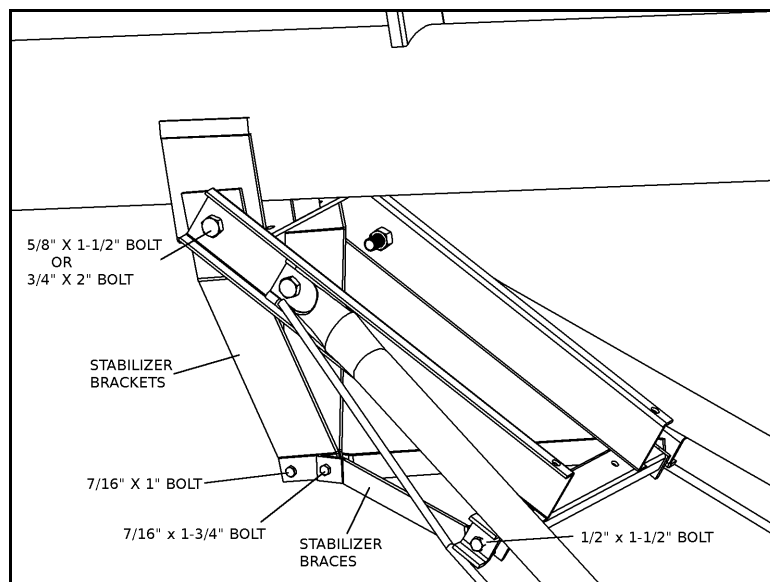


Figure 3.21 For 8" x 36', 41', 46', 51', and 10" x 41' with extensions

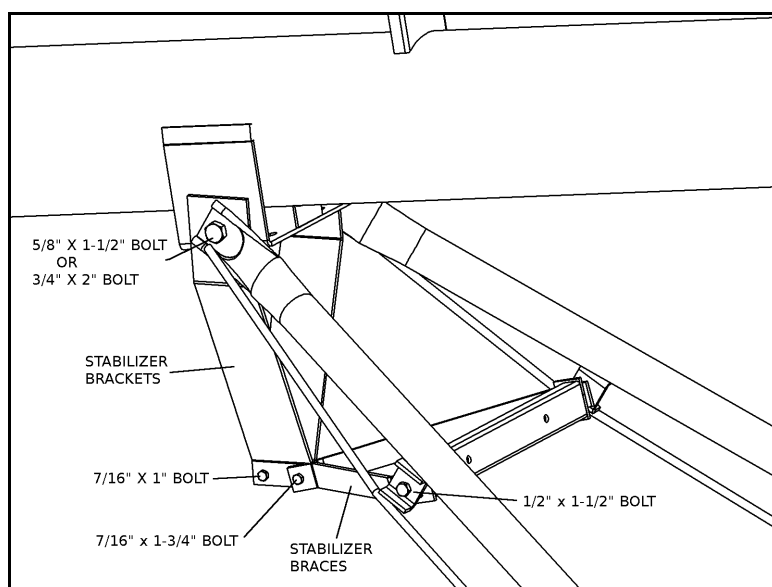


Figure 3.22 For 8" x 56', 61', and 10" x 51', 61', 71'

Important: Where applicable, make sure that the lower reach arms are attached to the proper reach arm bracket (Figure 3.13, 3.14).

11. Attach upper lift arms to roller track shoe with one 5/8" x 6-1/2" bolt and locknut. **Do not overtighten.** Tighten snug only; this bolt acts as a pivot point (Figure 3.20-3.22).

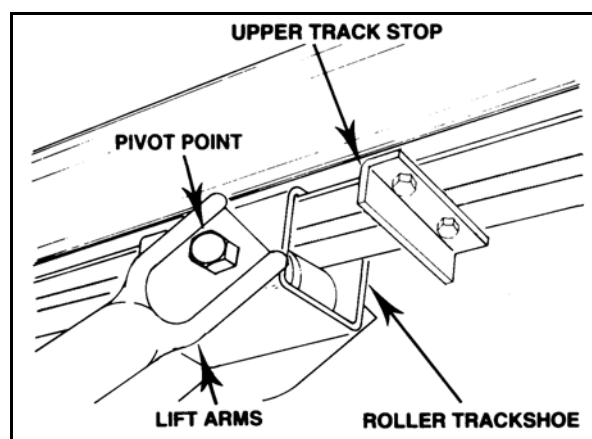


Figure 3.23



- The 6" x 61', 8" x 56'-61'-71' and the 10" x 51'-61'-71' augers require a 3/4" x 6-1/2" bolt and locknut.

- ➔ 12. For the 6" x 61' auger, attach required additional tubing crossbraces to the upper lift arms as follows:

- The correct assembly method is to slip the tube clamps over the flat pressed ends of the lift arms (where they are attached to the frame) and loosely attach the tubing cross braces to the tube clamps using five 1/2" x 1-1/4" bolts and locknuts.
- Use a c-clamp vise grip to squeeze and hold the tube clamps in position for attachment to the tubing cross braces. Once in position, tighten the bolts (Figure 3.24).

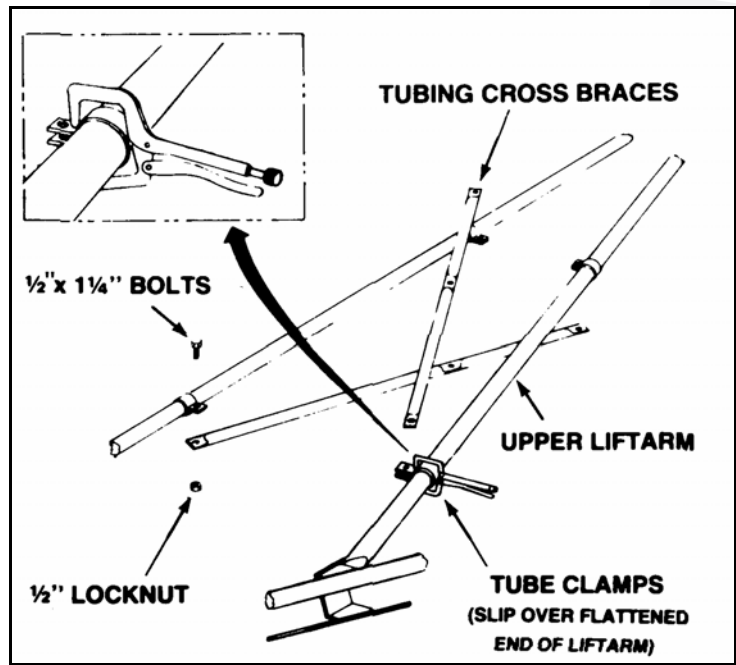


Figure 3.24

- ➔ 13. For the 8" x 56'-61'-71' and the 10" x 61'-71' augers, attach tubing crossbraces to the upper lift arms using five 1/2" x 1-1/4" bolts and locknuts (see Figure 3.25).


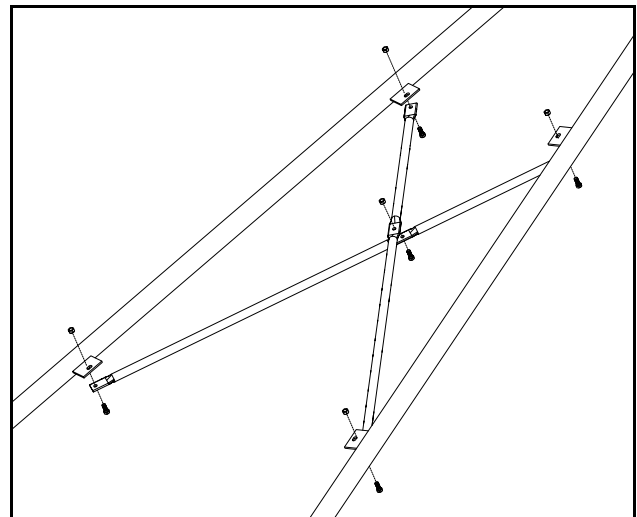


Figure 3.25

3.15. Winch and Lift Cable

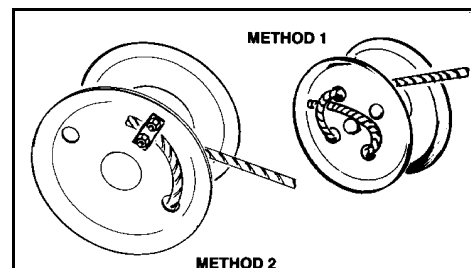1. Attach cable to winch using one of the 2 methods shown, depending on supplied winch.
 - If method 2 is used, the nut must be on the outside of the drum to prevent damage to the cable. Leave about one inch of cable extending past the clamp. Cable must leave winch from bottom side.
2. The winch must have a minimum of 3 wraps of cable on drum when auger is in transport position.
3. Attach winch to winch mount with three 3/8" washer locknuts.



Important: Winch handle must be positioned on the left side of the auger (determine left by standing at the intake end, facing the discharge end).

If auger has more than 1 winch mount, use the bracket nearest the intake end.

4. Thread lift cable under and around roller on track shoe, then back to cable attach rod welded to lower end of track.

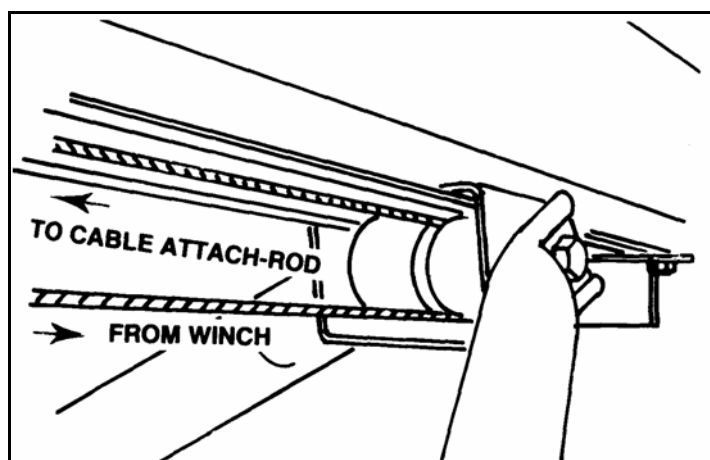


Figure 3.26

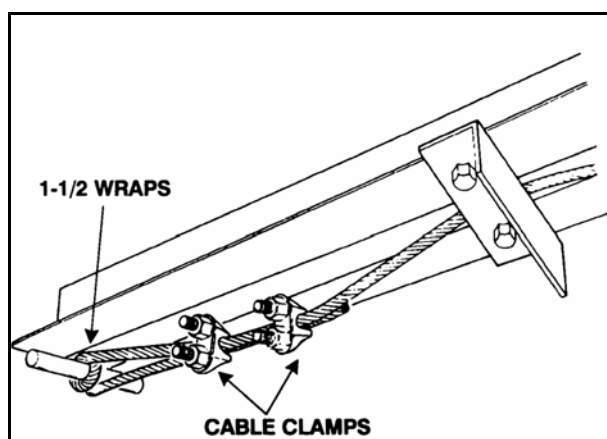


Figure 3.27

Note: On augers equipped with a lower angle-iron track stop, the cable must be threaded between track stop and auger tube to cable rests on top of the track stop (See Figure 3.27).

5. Wrap cable 1-1/2 times around the cable attach rod and secure with two 1/4" cable clamps. Position cable clamps as shown in Figure 3.27 and 3.28. Tighten clamps securely.

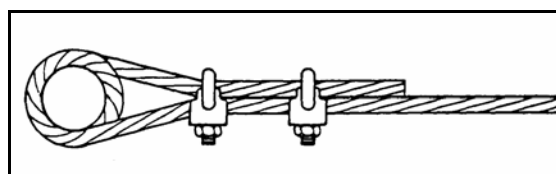


Figure 3.28

Note: Make certain cable is properly seated in cable groove before raising auger.

3.15.1. Winch Handle

This auger may use one of several different winch models. Before installing handle on the main winch assembly, check the model number stamped on winch housing and follow the correct set of instructions.

⚠ CAUTION Winch handle assembly must follow the instructions below. Improper assembly will result in sudden winch failure causing damage to equipment and/or personal injury.

Model K1051 & K1550:

See Figure 3.29.

1. Slide handle over flat sides of input shaft.
2. Fasten with 1/2" locknut.

Important: Do not remove or loosen the double locknut on the input shaft: it is an important part of the brake system of the winch.

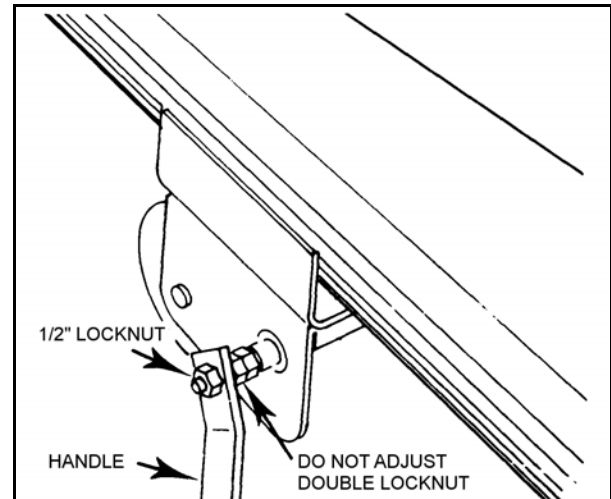


Figure 3.29

Model K2550:

See Figure 3.30.

1. Slide handle over flat sides of input shaft.
2. Fasten with 1/2" locknut.

Important: Do not remove or loosen the locknut on brake side of winch: it is an important part of the brake system of the winch.

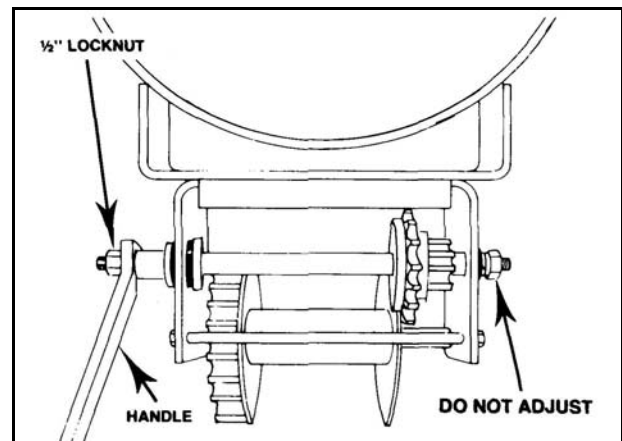


Figure 3.30

3.16. Mounting Motor

Important: Refer to Section 2.3.1. Electric Motor Safety on page 9 for installation requirements.

Important: If installing a speed reducer, the motor mount is installed on the opposite side of the gearbox, refer to the speed reducer kit instructions.

See Figure 3.32 and 3.33.

Table 3.31. Electric Motor Horsepower Requirements^a

Auger Length	Horsepower (hp) for Auger Diameter		
	6"	8"	10"
26'	3	3-5	-
31'	3	5	7.5-10
36'	3	5-7.5	-
41'	3	5-7.5	10-15
46'	-	7.5	-
51'	5	7.5	15-20
56'	-	10	-
61'	7.5	10	20
71'	-	15	20-25

a. Approximate horsepower requirements under normal conditions. When augering full tube of high moisture grain, additional horsepower will be needed.

1. Attach electric motor mount to gearbox with bolts and lockwashers (see Figure 3.32 and Table 3.31. for horsepower requirements).



All 26' and 31' augers (except the 10" x 31' auger) require the motor mount to be positioned toward the intake end of the gearbox.

2. Secure the tube clamp and motor mount supports with 7/16" x 1" bolts and locknuts.
3. Attach pulley guard bracket to motor mount with two 7/16" x 1" bolts and locknuts.

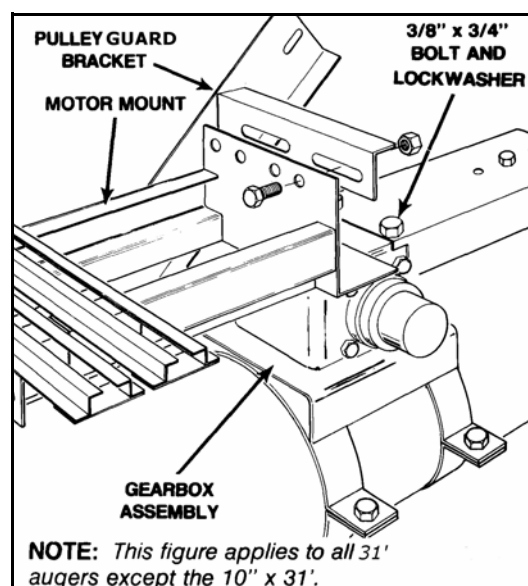


Figure 3.32

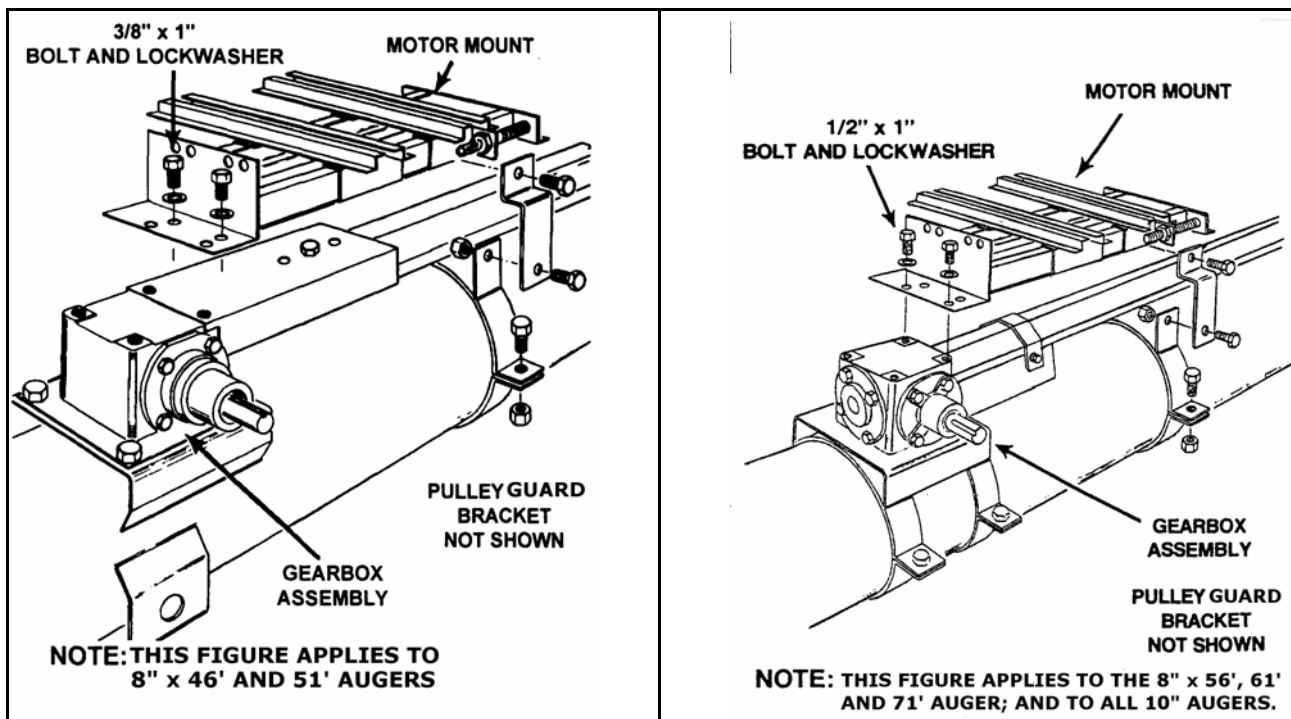


Figure 3.33

4. Attach pulley guard backplate to pulley guard bracket with two 1/4" x 1/2" bolts and whiznuts (Figure 3.34). Leave bolts/nuts loose to be tightened later.
5. Slide 13" pulley onto gearbox shaft with the pulley hub facing the gearbox. Insert a 1/4" x 1-1/2" square key and tighten set screws.

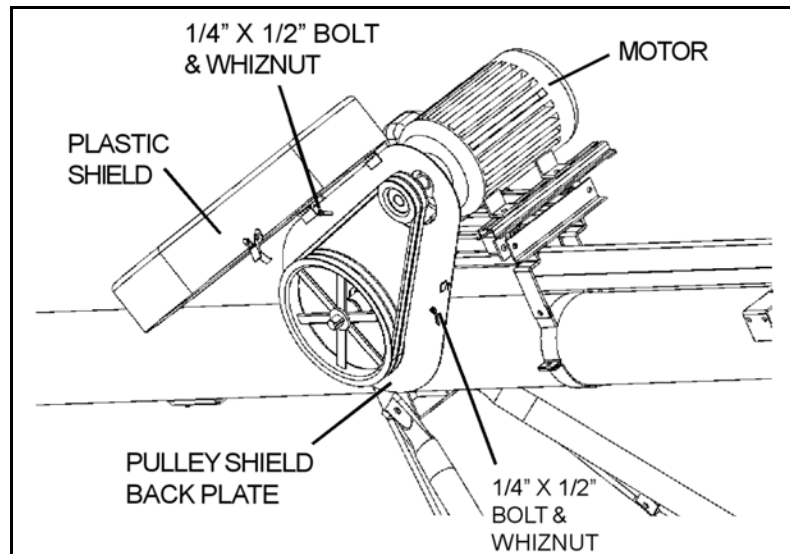


Figure 3.34



- The 8" x 56', 61', and 71' augers and all 10" augers require a 15" triple groove pulley.

6. Slide drive pulley onto motor shaft. Insert a 1/4" x 1-1/2" square key and tighten set screws.

Note: The correct pulley size (based on a 1750 rpm motor) is as follows:

AUGER SIZE	PULLEY DIAMETER
All 6"	7.5" (190.5 mm)
8" to 51'	7.0" (178.0 mm)
8"x 56', 61', and 71'	4.5" (114.0 mm)
All 10"	4.5" (114.0 mm)

7. Place electric motor onto mount and secure. Do not tighten.
8. Place belts on pulleys and apply slight tension. Align the 2 pulleys (use a straight edge). Tighten motor bolts and pulley set screws.

Note: Once all bolts and set screws are tightened, re-check alignment. Proper alignment will prolong belt life.

9. Adjust the plastic pulley guard backplate to make sure it will not rub on the electric motor shaft. Tighten backplate mount bolts/nuts securely.
10. Close and lock the plastic pulley guard into place (Figure 3.35).

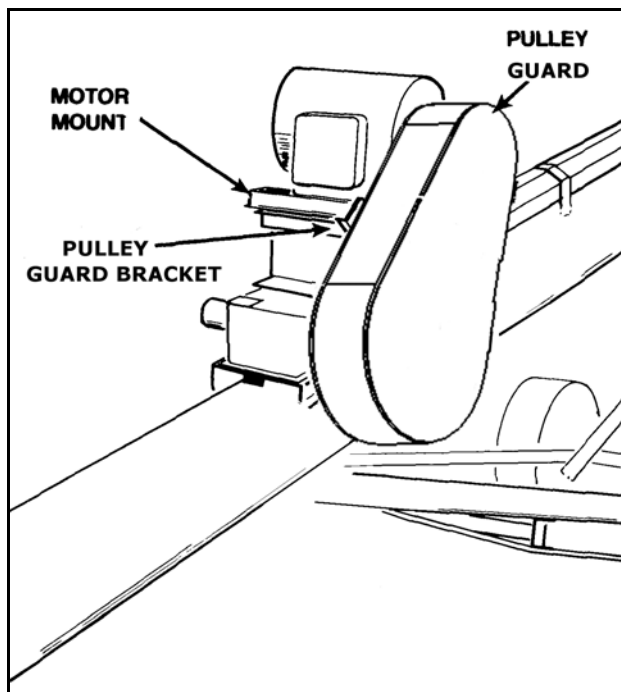


Figure 3.35

3.17. Plastic Manual Container

- ➔ 1. For WR60 x 61', WR80 x 56'-71, and WR100 x 51'-71' auger models: Attach the manual container bracket to the top of the axle, centered between the two wheels, using a 3/8" x 3-1/16" square U-bolt, two 3/8" washers, and two 3/8" locknuts (see Figure 3.36).

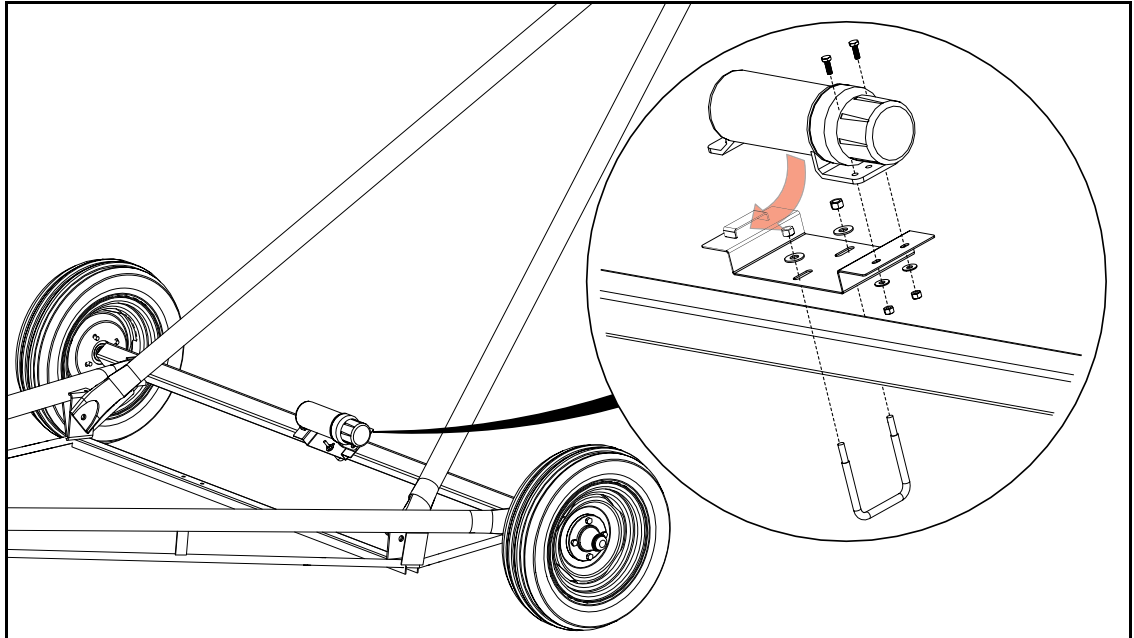


Figure 3.36

- ➔ 2. For WR60/80 x 26'-51' and WR100 x 31'-41' auger models: Attach the manual container bracket to the top of the axle, centered between the two wheels, using a 3/8" x 2-1/2" U-bolt, two 3/8" washers, and two 3/8" locknuts (see Figure 3.37).

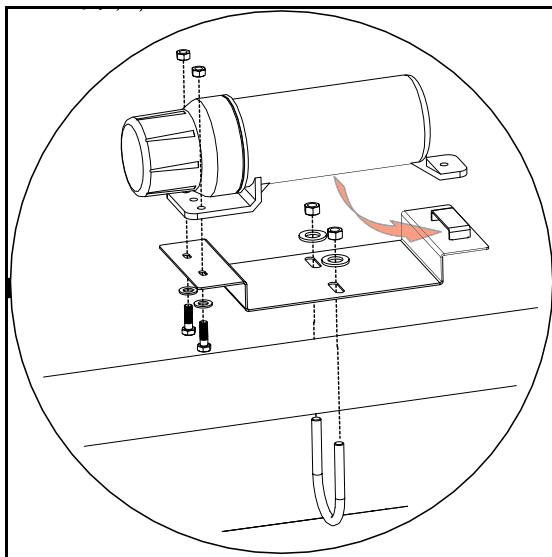


Figure 3.37

3. Slide the tab on the bottom of the manual container into the raised slot in the bracket.
4. Bolt the manual container to the bracket using two 1/4" x 3/4" bolts, two washers, and two 1/4" locknuts.

3.18. Model Decal Placement

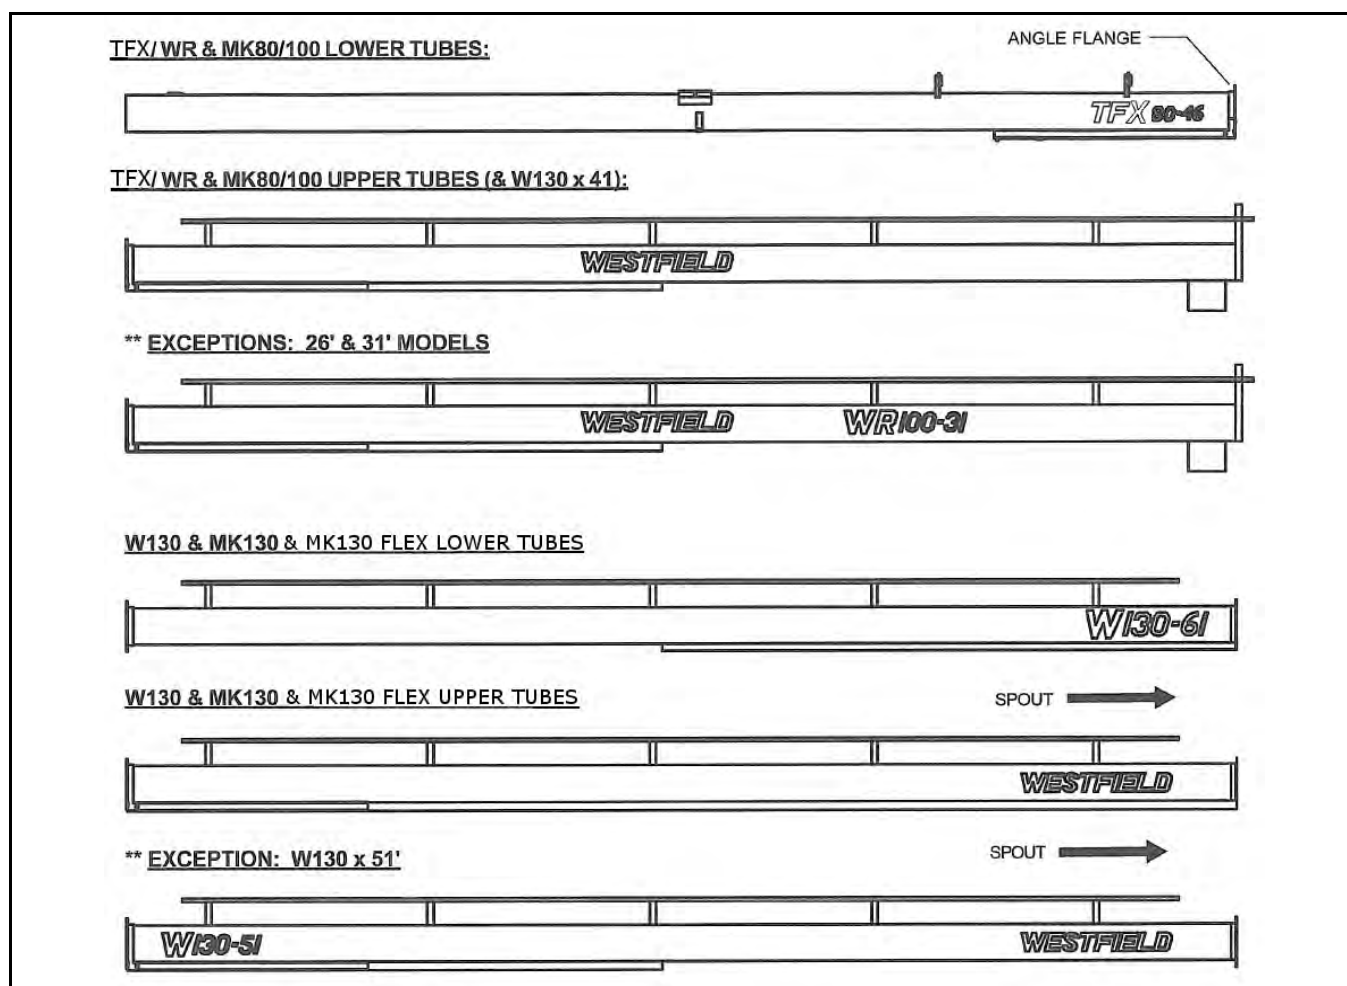


Figure 3.38

Important: Do not cover any existing safety or instruction decals with the model decals.

For most decal placement, follow the figure above. Apply decals to both sides of auger tube.

Lower Tubes: Place decals just below the angle flange, centered on the tube. Decals must be easily seen from the ground when auger assembly is complete. (For 36' augers, the model decal can be located in the center of the lower tube.)

Upper Tubes: Place Westfield decals in the center of the upper tube, where they are easily seen from the ground when auger assembly is complete. For the W130 & MK130 series, the Westfield decal is located at the top end of the upper middle tube.

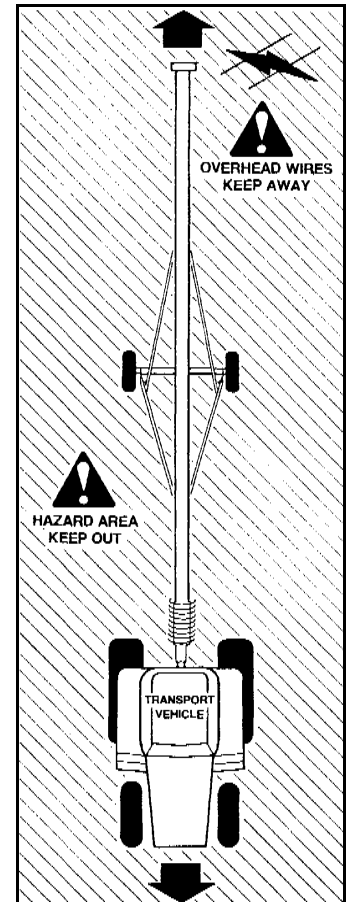
4. Transport & Placement



Before continuing, ensure you have completely read and understood this manual's Safety chapter, in addition to the safety information in the section(s) below.

4.1. Transport & Placement Safety

- Transport auger in full down position with slight tension on cable.
- Properly place hitch pin and securely attach safety chain. Use a type of hitch pin that will not allow auger to separate from towing vehicle.
- Always attach an SMV (slow moving vehicle) sign before transporting auger. Equip the auger with the necessary lights for transportation where required by law. Always use hazard warning flashers on the tractor/towing vehicle when transporting unless prohibited by law.
- Always travel at a safe speed, never exceeding 15 mph (24 km/hr). Reduce speed on rough surfaces and be cautious when turning corners or meeting traffic.
- Before raising/lowering/moving the auger, make sure the area around the auger is clear of obstructions and/or untrained personnel. Never allow anyone to stand on or beneath auger while transporting or placing auger.
- Do not transport auger on slopes greater than 20°.
- Wheels must be free to move when raising or lowering auger.
- Never attempt to move auger manually. To do so will result in serious injury.



- When lowering the auger the track shoe may become stuck; if this happens, do not continue to turn the winch handle counter-clockwise because it will disengage the brake mechanism and create an unsafe condition. Too much slack in the cable may also cause the auger to drop suddenly.
- The winch must make a clicking sound when raising auger. If clicking sound stops, retain grip on handle, lower auger fully and repair winch.
- After lowering auger, turn handle clockwise two clicks to lock winch brake.
- Always keep a minimum of three cable wraps on the winch drum.
- The winch is designed for manual operation only.

4.2. Transport Procedure

Follow all safety precautions when transporting the auger and use a proper towing vehicle.

1. If auger is raised, place in full down position. The roller track shoe should be seated against the upper track stop with slight tension on the lift cable. Refer to "Lowering & Completion" on page 53.

Important: The winch must have a minimum of 3 wraps of cable on drum when auger is in transport position.

2. Lock winch: turn handle clockwise until 2 clicks are heard.
3. Place and secure hitch pin and safety chain. The safety chain should be threaded through handle on the lower tube and wrapped around auger tube before attaching to the towing vehicle (Figure 4.1).

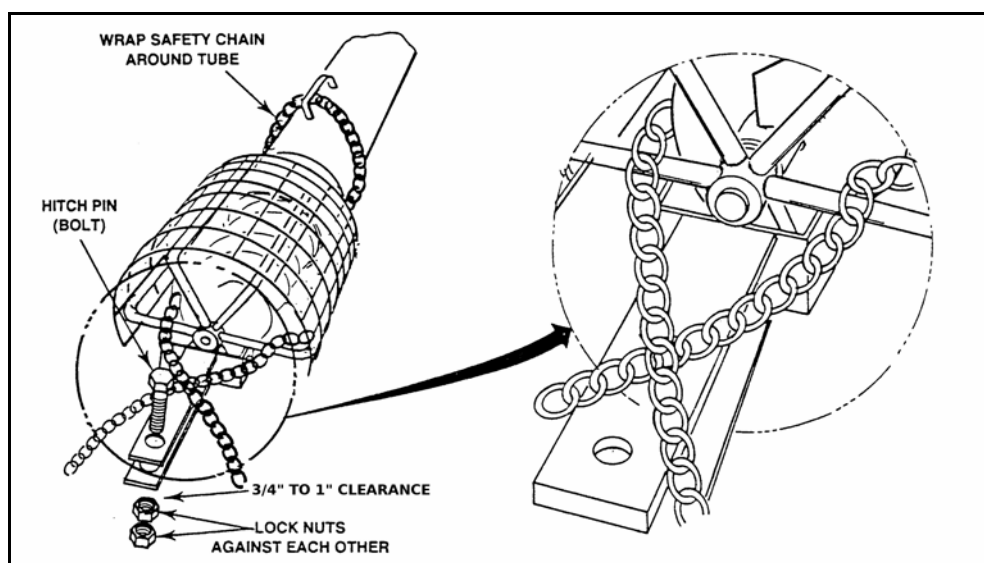


Figure 4.1

Important: Use a type of hitch pin (see Figure 4.1) that will not allow auger to separate from towing vehicle.

WARNING If auger wheels are partially or fully buried in snow or grain, failure to clear area around the wheels before moving may cause damage to the auger or result in serious injury.

4. Beware of overhead obstructions and electrical wires and devices. The EMD augers have minimum clearances from 7'6" (2.29 m) to 15'6" (4.72 m) in normal transport position.
5. Refer to "Transport & Placement Safety" on page 45 for important safety information before towing.

4.3. Placement Procedure

1. Ensure towing hitch is in place and secure.

Important: Use a type of hitch pin (see Figure 4.1) that will not allow auger to separate from towing vehicle.

2. Before raising or positioning auger, make sure that entire area in line of travel, both on the ground and overhead, is clear of any obstructions or electrical wires.



WARNING

If auger wheels are partially or fully buried in snow or grain, failure to clear the area around the wheels before moving may cause damage to the auger or result in serious injury.

3. Place auger on reasonably level ground when raising, lowering, or positioning.

Note: Make certain cable is properly seated in cable groove before raising auger. Refer to Figure 3.26.

4. To raise auger, turn winch handle clockwise. Use a firm grip on winch handle; do not release unless the ratchet pawl is fully engaged.

NOTICE

Do not turn winch handle counter-clockwise except when lowering auger or severe damage to winch will occur.

Important: Winch must make clicking sound when raising auger. If clicking stops, retain grip on handle, lower auger fully, and repair ratchet.

5. Move the auger into working position slowly. Do not unhitch and attempt to move auger by hand.



WARNING

Never attempt to increase height of auger by positioning wheels on lumber, blocks, or by any other means. To do so will result in damage to equipment and/or personal injury.

6. Once auger is in position, chock wheels on both sides to prevent movement during operation.

Important: When releasing auger from the towing vehicle, test the intake end for downward weight. Do not raise the intake end above drawbar height. When the intake end is elevated too high with auger in raised position, the balance of weight quickly transfers to the discharge end, causing it to upend. Ensure proper anchoring/support.

7. When operating auger in the raised position, rest the discharge end lightly on the bin roof, or tie to bin to prevent wind from toppling auger. When operating the auger in a freestanding position, anchor the intake end.

8. Anchor and/or support auger during operation.

- When lower half of auger empties of grain, the weight balance transfers to upper end of auger, which can cause upending.

9. Refer to "Lowering & Completion" on page 53 for correct lowering procedure.



CAUTION

Do not use auger as a hoist to raise any object regardless of weight. This will create an unsafe condition and will void warranty.

5. Operation



Before continuing, ensure you have completely read and understood this manual's Safety chapter, in addition to the safety information in the section(s) below.

5.1. Operation Safety

- Have another trained person nearby who can shut down the auger in case of accident. Always work with a second trained person around augers.
- Do not operate with any of the safety guards removed.
- Keep body, hair, and clothing away from moving parts. Stay away from intake during operation.
- Inspect lift cable before using auger. Replace if frayed or damaged. Make sure it is seated properly in cable sheaves and cable clamps are secure.
- Operate auger on level ground free of debris. If ground is uneven, anchor the auger to prevent tipping or upending.
- Augers are not insulated. Keep away from electrical lines. Electrocution can occur without direct contact.
- Support the discharge end and/or anchor the intake end before operating to prevent upending.
- Do not use auger as a hoist.
- Empty auger before raising or lowering.
- Lower auger at completion of operation or when not in use. Auger could drop rapidly in case of cable break or hydraulic failure (where applicable).
- Keep the work area clean and tidy.
- Lock winch before operating auger.

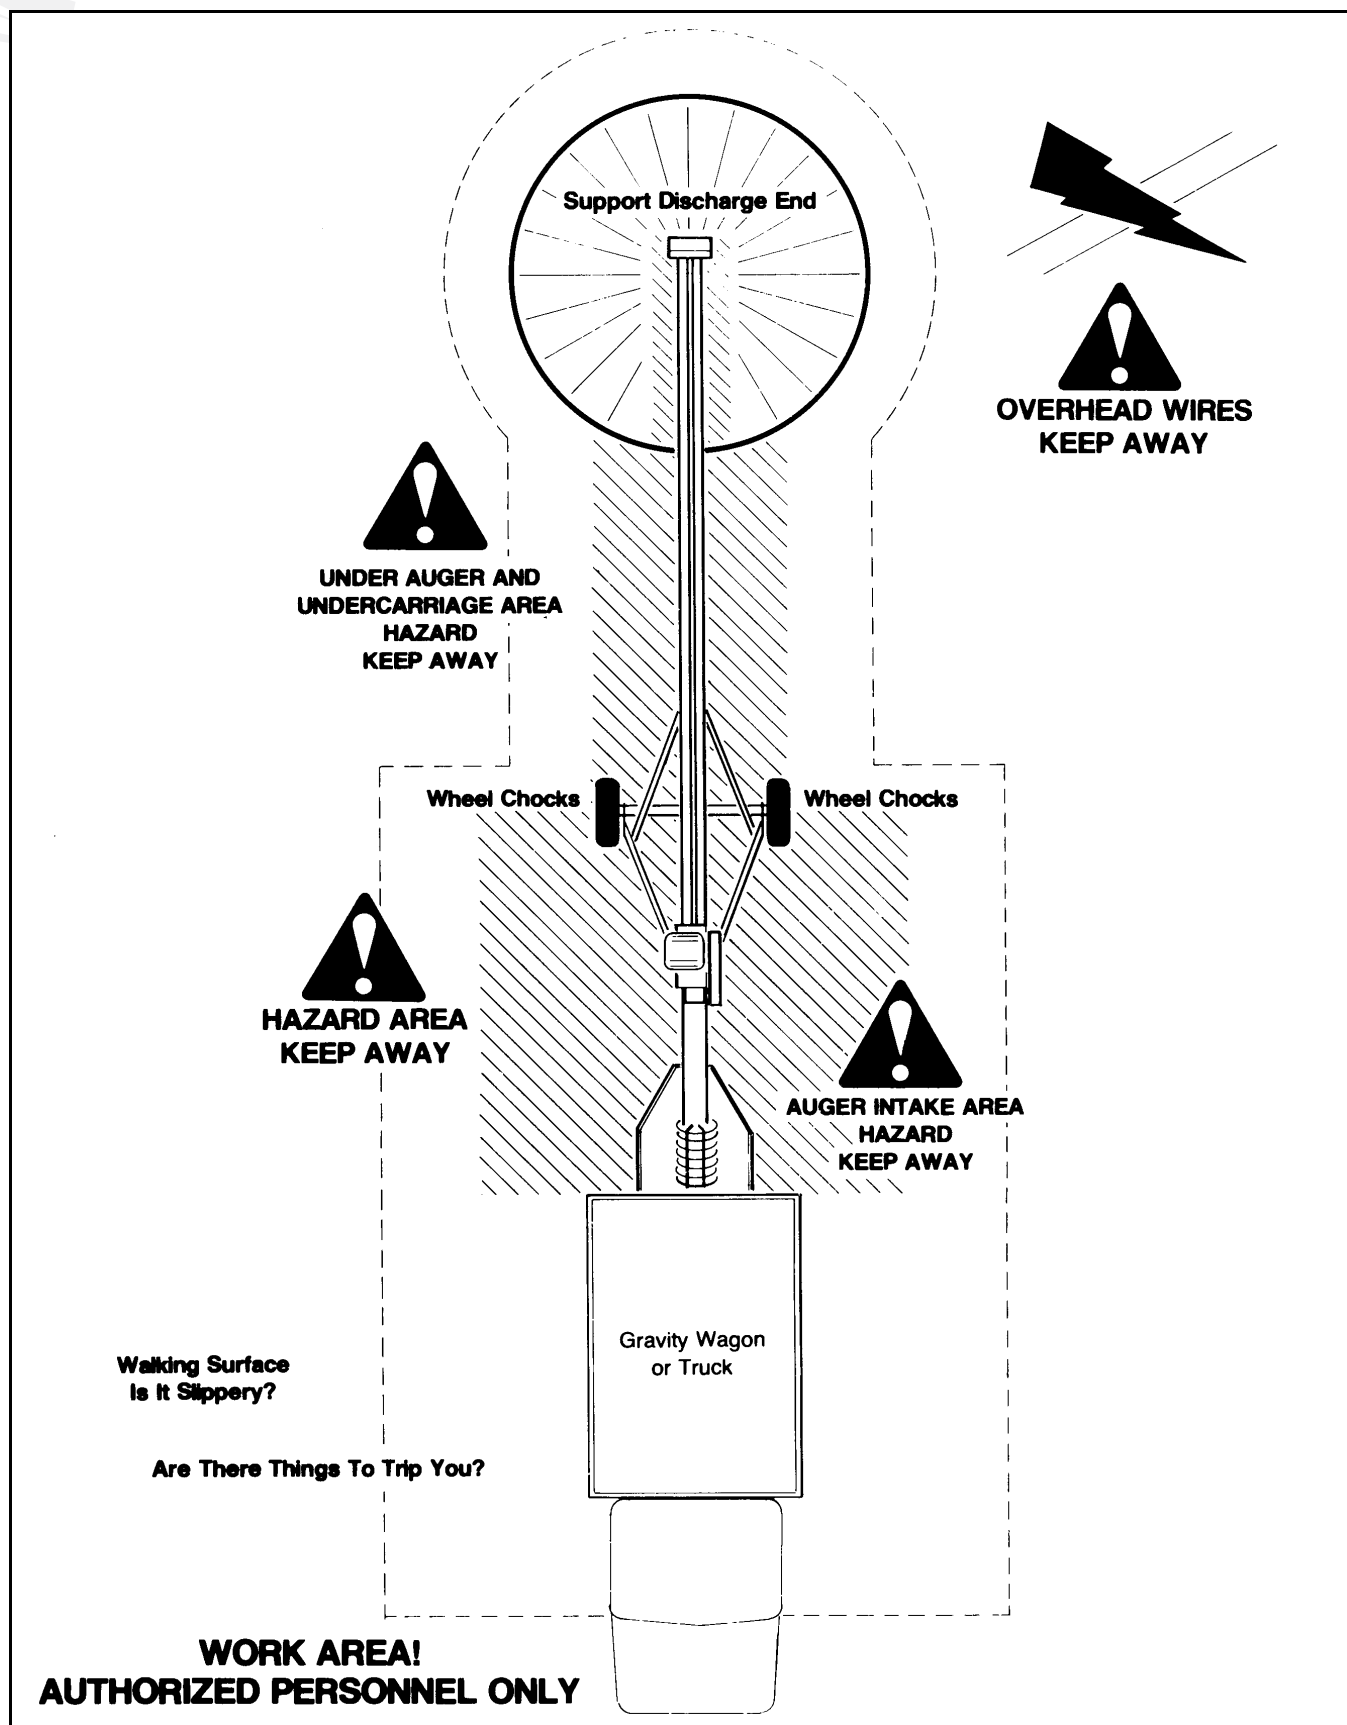


Figure 5.1

5.2. Pre-Operational Checklist

Before operating auger each time, the operator must confirm the following:


- All fasteners are secure as per assembly instructions.
- Drive belt(s) are not frayed or damaged.
- Drive belt(s) are properly adjusted and aligned.
- Lift cable is not frayed or damaged.
- Lift cable is properly seated in cable sheaves.
- Cable clamps are secure.
- Tube alignment is reasonably straight.
- Auger wheels are chocked.
- Intake area and discharge spout are free of obstructions.
- Proper maintenance has been performed.
- All safety guards are in place and secure.

5.3. Operating Procedure

5.3.1. Start-Up & Break-In

1. Properly place auger and complete the pre-operational checklist at the beginning of this chapter. If everything is satisfactory, prepare for a 30-minute operation.
2. Correctly position portable grain hopper and secure it to the auger with both straps (where applicable).

Important: Anchor and/or support auger during operation. When lower half of auger empties of grain, the weight balance transfers to the upper end of auger, which can cause upending.

 **CAUTION** Do not start auger until area is clear of all unauthorized personnel.

3. Start electric motor, then feed grain to auger.

Important: When starting auger for the first time, be prepared for an emergency shutdown in case of excessive vibration or noise. Note that auger may run rough until tube is polished.

4. Upon completion of initial run, shutdown auger. Refer to "Shutdown" on page 52 for more information.
5. Lock out motor and conduct a complete inspection of auger following the checklist at the beginning of this chapter.

After the initial start-up and inspection, the auger should be shut down and inspected at least three more times during the first 10 hours of operation.

Keep operation of empty auger to a minimum, as this results in excessive wear.

Once auger is broken in, the checklist should be a part of the daily routine before operating auger.

5.3.2. Operating With A Full Load

1. When operating the auger, always work with a second person in a position to monitor the operation and initiate a shutdown in case of emergency.
2. Monitor the auger during operation for abnormal noises or vibrations.
3. Shut off all power before making adjustments, servicing, or clearing the machine.

USE OF GRAIN SPREADERS: Many grain spreaders cannot handle the large capacity of some augers. Some augers plug, causing damage to the flighting and other drive components. This type of damage is not covered by warranty. Hints on how to avoid this...

- Get a larger spreader, if available.
- Remove the spreader.
- Make sure spreader is turned on and operating.
- When using a flex down spout, center auger spout above spreader and do not lower auger spout into spreader.
- Suspend the spreader lower from bin ceiling leaving extra room for excess grain to flow over the spreader.

BIN LEVEL INDICATORS: These augers are fast and bins fill up quickly. A full bin will cause auger to plug, which can damage the flighting and other drive components. Installing quality grain-level indicators on your bins will allow you to monitor bin filling and help prevent damage to your auger.

5.3.3. Shutdown

Normal Shutdown:

1. Near the end of a load, decrease the flow of grain until auger is clear.
2. Once auger is clear, stop motor and lock out power.

Note: Remember that the flighting rpm on augers equipped with electric motors is not adjustable except with a change of pulley size.

Emergency Shutdown / Full-Tube Restart:

1. If the auger is shut down for an emergency, lock out motor before correcting the problem.
 - If the problem is plugging, clear as much of the grain as possible using a piece of wood, vacuum cleaner, or other tool before restarting auger. **Do not reach in and use your hands.**

NOTICE Starting the auger under load may result in damage to unit. Be sure there is no blockage.

5.3.4. Lowering & Completion

After operation:

1. Clean entire work area.
2. Remove all supports and chocks.
3. Move auger out of working position and lower fully (see Lowering procedure below).
4. Clean out auger (see Clean out procedure below).
5. Prepare for transport and placement or storage (see appropriate chapters for more information).

Lowering:

1. Ensure area beneath auger is clear.
2. Turn winch counterclockwise to lower (no clicking sound when lowering).
 - Use a firm grip on handle. Do not release unless ratchet pawl is fully engaged.
 - The winch is designed for manual operation only.
 - When lowering, never continue to turn handle counterclockwise if the cable does not keep moving out under load. This will disengage the brake mechanism and create an unsafe condition. If this happens, winch in slack cable and correct problem.
3. After lowering, turn handle clockwise until you hear 2 clicks to lock brake.



Do not leave auger in raised position when not in use. Auger could drop rapidly due to a cable break. High winds may also upset auger.

Clean out:

1. Shut off motor and lock out power.
2. Manually clean out grain with a piece of wood, vacuum cleaner, or other tool. Do not use hands.
3. If auger has been used to move fertilizer, it should be cleaned out to prevent corrosion. The easiest way to prevent corrosion is to run a load of grain through it after moving fertilizer.

6. Maintenance & Storage



Before continuing, ensure you have completely read and understood this manual's Safety chapter, in addition to the safety information in the section(s) below.

6.1. Maintenance Safety

- Shut down and lock out all power before attempting maintenance of any kind. **If applicable**, disconnect PTO driveline from tractor or hydraulic hoses on units with hydraulic drive hoppers.
- After maintenance is complete, replace and secure all safety guards and safety devices, and if applicable, service doors and cleanout covers.
- Support auger tube before attempting maintenance on the undercarriage assembly. Auger should be in full down position for maintenance.
- Use only genuine Westfield replacement parts or equivalent. Replacement parts such as intake guards, pulley guards, PTO driveline shields, winches, and lift cables must meet ASABE standards or serious injury may result. Use of unauthorized parts will void warranty. If in doubt, contact Westfield or your Westfield dealer.
- Do not modify any auger components without authorization from Westfield. Modification can be dangerous and result in serious injuries.

Proper maintenance habits on the EMD auger mean a longer life, better efficiency, and safer operation. Please follow the guidelines below.

6.2. General Maintenance Procedures

Area	Maintenance Procedure	Frequency
General	While auger is in use, observe the operation checklist on page 51.	Daily
General	Check all operating, lifting, and transport components. Replace damaged or worn parts before using auger. For replacement instructions, see Chapter 3.	Regularly
Lift Cable	Check and replace if frayed or damaged. Make sure cable clamps are secure.	Periodically
Wheel Hubs	Repack with lithium-based grease.	Every 2–3 years
Tire Pressure	Check with a pressure gauge. Pressure should be maintained according to tire side-wall recommendations.	Monthly, or if it seems low
Upper Drive Chain	Fill enclosed upper drive housing to plug level with grease. WR60: 550 g (20 oz) WR80 x 26' - 51': 750 g (26 oz) WR80 x 56' - 71': 900 g (32 oz) WR100: 1100 g (40 oz) For continuous use in extreme cold, semi-fluid arctic grease or heavy oil may be used.	Regularly

Area	Maintenance Procedure	Frequency
Drive Chain Adjust-ment	Maintain 1/4" - 1/2" (0.64 cm - 1.27 cm) chain deflection. To adjust, loosen bolts on top bearing in the upper drive housing, adjust chain to proper tension, and re-tighten bolts	Regularly
Intake Bushing	Lubricate.	Daily
Gearbox	Maintain oil level at half full (center of cross shaft) with EP90 lube oil. Ensure gearbox is level when checking or refilling Do not overfill	Oil must be added to gearbox before operating, and then regularly as needed
Drive Belt	Check and replace if frayed or damaged. Ensure tension is correct under load (correct tension is the lowest at which the belts will not slip under peak load conditions)	Frequently
Winch Note: Service winch with auger in fully lowered position and cable slack.	Keep a film of grease on gears.	Regularly
	Oil the ratchet pawl pivot, bushings, and pinion threads. Do not get oil or grease on brake discs.	Occasionally
	Replace brake discs if less than 1/16" (1.6 mm) thick.	As required
	Check for proper ratchet pawl operation. When cranking in (clockwise) = loud clicking When cranking out (counterclockwise) = no clicking and ratchet pawl fully engaged into gear teeth	Regularly
Truss Cables	Adjust to keep auger tube reasonably straight.	As necessary


6.3. Storage Safety

- Store the unit in an area away from human activity.
- Do not permit children to play on or around the stored equipment.

6.4. General Storage Procedures

To protect auger in storage during the off season:

1. Lower the auger to full down position with a slight tension on cable.
2. Lubricate all grease fittings according to the maintenance procedure.
3. Inspect auger for damage and note any repairs required. Order replacement parts from your dealer.
4. Check tire pressure and inflate according to tire side-wall recommendations.
5. Cover motor with protective cover from weather.
6. Tow auger to storage site and chock wheels.

 **CAUTION** Support discharge end of auger before removing or replacing any parts on the undercarriage.

To prepare auger for use after storage:

1. Check tire pressure and inflate to pressure indicated on tire sidewall if necessary.
2. Tow auger to worksite.
3. Remove protective covering from motor.
4. Check oil level in gearbox and refill if needed, half full only. Do not overfill.
5. Replace any damaged parts and decals.
6. Conduct general maintenance procedures before using auger.
7. Before raising auger after storage, make certain cable is in good condition, replacing it if frayed or damaged. Also make sure cable is properly seated in roller track and that cable clamps are secure.
8. On augers equipped with lubricated upper drive, check level of lubrication annually and add as needed. Refill to plug level.

7. Troubleshooting



Before continuing, ensure you have completely read and understood this manual's Safety chapter, in addition to the safety information in the section(s) below.

This chapter covers possible causes and solutions to problems you may encounter. If you encounter a problem that is difficult to solve, even after having read this chapter, please contact your local Westfield dealer or distributor. Before contacting them, please have this operation manual and your machine's serial number handy.



WARNING Shut down and lock out all power sources before diagnosing any of the causes or attempting any of the solutions below.

Problem	Possible Cause	Remedy
Excessive noise or vibration. *Remember to follow proper break-in procedures—auger may run rough until tube is polished. If noise is extreme from outset or continuous after several loads of grade are fed, continue with troubleshooting below	Chatter from wooden bearings.	Spray penetrating lubricant between shaft and bearing surface. Bearings will break in over time. *If replacement of a bearing becomes necessary, split bearings are available to avoid having to slide all bearings off driveshaft.
	Truss cables incorrectly adjusted.	Support end of auger and adjust cables so auger is flat or curves slightly upwards.
	Flighting peeled back due to plugging.	Inspect spout end of auger for flight condition. Remove and replace flight sections as necessary.
	Top drive inadequately lubricated.	Fill to appropriate level with grease. Top drive is not designed to be filled with oil.
	Bent flighting sections.	Support auger and remove all flight sections. Check for straightness of flight stubs by rolling across flat concrete section. Straighten stub or replace as necessary. Take care not to bend flighting when reinstalling.
	Obstruction in tube.	Visually inspect for cloth or trash wrapped around flighting, or buildup of gum from oily crops such as flax or canola.
Drive belts jumping off pulleys.	Motor misaligned.	Ensure drive and driven pulleys are correctly aligned.
	Belts mismatched.	Check assembly section for correct belt sizes and only replace in pairs.
	Belt tension inadequate.	Maintain correct tension as per assembly section.
	Using a lower horsepower motor than recommended.	See manual for recommended motor sizes.

Problem	Possible Cause	Remedy
Shear bolts fail repeatedly.	Incorrect shear bolt type.	Replace with correct part number. Westfield shear bolts are specifically designed to provide correct driveline protection.
	Shear bolt hole worn out-of-round.	Frequent use of the incorrect shear bolt size can wear the mounting hole creating a "scissor effect," which will require replacement of the affected parts.
	Corn spreaders in bin unable to keep up with auger output.	Slow down auger or remove corn spreaders.
	Flighting peeled back as a result of plugging.	Occurs when bin has overfilled, or corn spreaders restrict end of discharge. Inspect flighting at discharge end of auger. If necessary, replace flighting.
	Driveline failure (bearing, gearbox, etc.).	See Maintenance Section.
Premature wear on auger tubes.	Auger being run at low capacity or empty for extended period of time.	Frequently occurs on farms using grain wagons. Auger should not be left unattended when filling bins. Depending on application, a belt conveyor may be more appropriate.
	Bent flighting.	
	Flighting allowed to wear beyond normal point of replacement.	When flighting becomes razor-thin at intake, replacement is critical. Since flight material is double thickness at welded lap joints, high spots on flight occur and can accelerate spot tube wear.

8. Appendix

8.1. Bolt Torque Values

Tables 8.1 and 8.2 give correct torque values for various bolts and capscrews. The bolt diameter is measured to the outside of the threads. When tightening all bolts, tighten the nut on the bolt to the torque specified in the tables, unless otherwise specified. Do not replace or substitute bolts, nuts, or other hardware that is of lesser strength than the hardware supplied by the manufacturer.

Torque values indicated below are valid for non-greased or non-oiled threads and head, unless otherwise specified. Therefore, do not grease or oil bolts or capscrews unless otherwise specified in this manual. When using locking elements, increase torque values by 5%.

Table 8.1 SAE Bolt Torque


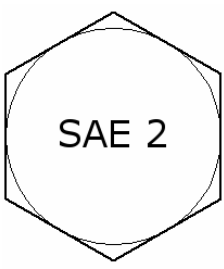
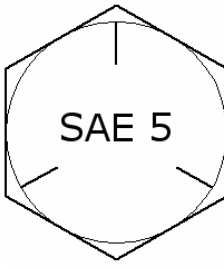
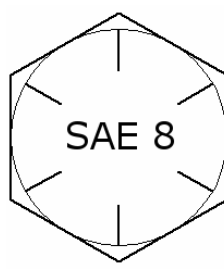
<div>    </div>						
Bolt Diameter	(N·m)	(ft·lb)	(N·m)	(ft·lb)	(N·m)	(ft·lb)
1/4"	8	6	12	9	17	12
5/16"	13	10	25	19	36	27
3/8"	27	20	45	33	63	45
7/16"	41	30	72	53	100	75
1/2"	61	45	110	80	155	115
9/16"	95	60	155	115	220	165
5/8"	128	95	215	160	305	220
3/4"	225	165	390	290	540	400
7/8"	230	170	570	420	880	650
1"	345	225	850	630	1320	970

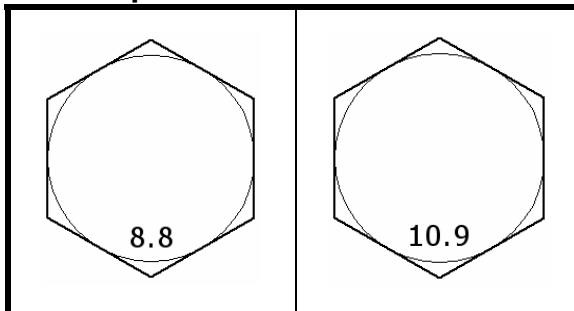Table 8.2 Metric Bolt Torque



Bolt Diameter	(N-m)	(ft-lb)	(N-m)	(ft-lb)
M3	0.5	0.4	1.8	1.3
M4	3	2.2	4.5	3.3
M5	6	4	9	7
M6	10	7	15	11
M8	25	18	35	26
M10	50	37	70	52
M12	90	66	125	92
M14	140	103	200	148
M16	225	166	310	229
M20	435	321	610	450
M24	750	553	1050	774
M30	1495	1103	2100	1550
M36	2600	1917	3675	2710

WARRANTY

Westfield Industries Ltd. warrants products of its manufacture against defects in materials or workmanship under normal and reasonable use for a period of one year after date of delivery to the original purchaser.

Our obligation under this warranty is limited to repairing, replacing, or refunding defective part or parts which shall be returned to a distributor or a dealer of our Company, or to our factory, with transportation charges prepaid. This warranty does not obligate Westfield Industries Ltd. to bear the cost of labor in replacing defective parts. Any defects must be reported to the Company before the end of the one year period.

This warranty shall not apply to equipment which has been altered, improperly assembled, improperly maintained, or improperly repaired so as to adversely affect its performance. Westfield Industries Ltd. makes no express warranty of any character with respect to parts not of its manufacture.

The foregoing is in lieu of all other warranties, expressed or implied, including any warranties that extend beyond the description of the product, and the IMPLIED WARRANTY of MERCHANTABILITY is expressly excluded.

WESTFIELD INDUSTRIES LTD.

ROSENORT, MANITOBA

CANADA

R0G 1W0



P.O. Box 39

Rosenort, Manitoba, R0G 1W0, CANADA

PHONE: (866) 467-7207 (Canada & USA) or (204) 746-2396

FAX: (866) 768-4852

WEB: www.grainaugers.com

EMAIL: sales@grainaugers.com

Westfield is part of the Ag Growth International group



© Ag Growth International Inc. 2015

Printed in Canada